

IOM manual

topflo®

PT & PTS Peristaltic pumps

edition 2015 rev 1



Read this instruction manual carefully,
before you install and operate the pump




PT

PT05
PT10
PT15
PT20
PT25
PT32
PT40
PTX40
PT50
PT65
PTX80
PT80
PT100
PT125

PTS

PTS05
PTS10
PTS15
PTS20
PTS25
PTS32
PTS40
PTSX40
PTS50
PTS65
PTSX80
PTS80
PTS100
PTS125

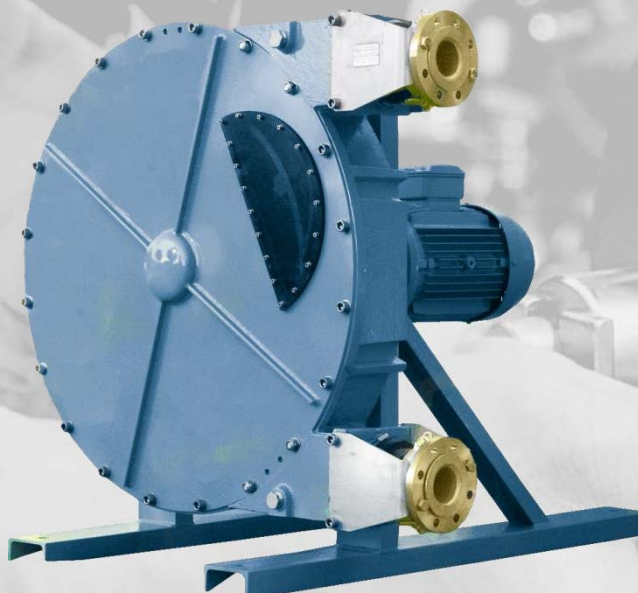

» All about your flow

www.tapflo.com

CONTENTS

| | |
|---|-----------|
| 1/ HOW TO USE THIS MAINTENANCE MANUAL | 3 |
| 2/ SECURITY AND GUARANTEES | 3 |
| 2.1 - Use of the pump | 3 |
| 2.2 - Responsibility | 3 |
| 2.3 - Training and instructions | 3 |
| 2.4 - Conditions of guarantee | 3 |
| 3/ DESCRIPTION | 4 |
| 3.1 - Product identification | 4 |
| 3.2 - Operation principle | 4 |
| 3.3 - Pump construction | |
| 3.3.1 - Pumps PT05 to PT20 | |
| 3.3.2 - Pumps PT25 to PT65 | |
| 3.3.3 - Pumps PT80 to PT125 | 5 |
| 3.4 - Pump hose | 8 |
| 3.5 - Pump gearbox | 8 |
| 3.6 - Electrical Motor | 8 |
| 3.7 - Available Options | 8 |
| 4/ INSTALLATION | 9 |
| 4.1 - Unpacking and control | 9 |
| 4.2 - Conditions of installation | 9 |
| 4.3 - Setup | 9 |
| 4.4 - Piping | 9 |
| 4.5 - Pump lifting | 10 |
| 5/ PUMP START-UP | 10 |
| 5.1 - Preparations | 10 |
| 5.2 - Pump start-up | 10 |
| 6/ MAINTENANCE | 10 |
| 6.1 - Emptying and filling of the lubricant | 10 |
| 6.2 - Hose cleaning | 12 |
| 6.3 - Hose replacement | 12 |
| 6.3.1 - Removing the hose | |
| 6.3.2 - Cleaning of the pump casing | |
| 6.3.3 - Reassembly of the hose | |
| 6.4.1 - REPLACEMENT OF PUMP SHOES (EXCEPT PT05, 10, PT15, PT20) | |
| Replacement of pump shoes (except PT05, 10, PT15, PT20) | |
| 6.4.2 - REPLACEMENT OF THE SEAL RING REP27 AND THE SHAFT SEAL REP26 | |
| Replacement of the seal ring REP27 and the shaft seal RP26 | |
| 6.4 - Replacement of spare parts | 16 |
| 6.5 - Shoe shimming | 20 |
| 6.6 - PTS series complementary information | 21 |
| 6.7 - Maintenance and periodical controls | 22 |
| 6.7.1 - Set up | |
| 6.7.2 - Pump starting | |
| 6.7.3 - Bearing case dismantling and lip seal pos26 replacement | |
| 6.7.4 - Maintenance and periodical controls | |
| 7/ STORAGE | 22 |
| 7.1 - Pump storage | 22 |
| 7.2 - Hose storage | 22 |
| 8/ TROUBLESHOOTING | 23 |
| 9/ CHARACTERISTICS AND TECHNICAL SPECIFICATIONS | 25 |
| 9.1 - Performances curves | 25 |
| 9.2 - Overall dimensions | 28 |
| 9.3 - Nomenclature | 32 |
| 9.4 - PT Spare parts list | 40 |
| 9.5 - PTS Bearing case parts list | 41 |
| 9.6 - Hose rupture and vacuum system parts list | 41 |
| 9.7 - Lubrication table | 42 |
| 9.8 - Shoe shimming table | 42 |
| 9.9 - Generated noise and temperature | 43 |
| 9.10 - Expandable hub assembly and disassembly : generalities | 44 |
| 9.11 - Torques | 45 |
| 9.12 - Weights | 46 |
| 10/ COMPLEMENTARY INSTRUCTIONS FOR ATEX CERTIFIED MATERIAL | 47 |
| 11 / SECURITY FORM | 55 |
| 12 / STATEMENT OF CE COMPLIANCE | 56 |

1/ HOW TO USE THIS MAINTENANCE MANUAL

This manual is specific to Tapflo PT and PTS series hose pumps. It allows the users to install, to start and to carry out maintenance on these pumps. All persons, fitters and users must read this maintenance manual in its entirety. The PT series are provided with a gearmotor and the PTS series are bare shaft pumps. All dimensions, spare parts, materials and characteristics are the same for the two series unless specified. Documents concerning the gearbox, the electrical motors as well as all other options (pulsation dampener, hose rupture detector etc) are provided in annex. Refer to in these documents to know the specific details of every apparatus.

Your local Tapflo distributor is at your disposal for the information that you would not find in this manual. For short reply, please indicate the following informations :

- Type of pump
- Pump serial number
- Reference of order

You can also visit our website tapflo.com for further information.

2/ SECURITY AND GARANTEES

2.1 - USE OF THE PUMP

The pump was defined for a specific application. Any other use which does not comply with envisaged use is not guaranteed.

Tapflo cannot be held responsible for damage or possible wounds produced during the use of the pump. The pump was designed in accordance with EU norms and applicable directives. Use the pump only for applications represented above. If you want to change your application, first contact your Tapflo pump distributor.

2.2 - RESPONSIBILITY

Tapflo will be under no circumstances responsible for damage or wounds caused by non respect of security directives and maintenance instructions contained in this manual, or by negligence during the installation, use, service or repair of Tapflo hose pumps. Moreover, additional directives of security can be necessary according to working conditions or according process. Contact your Tapflo distributor if you notice a potential danger during the use of the pump.

2.3 - TRAINING OF THE USER AND INSTRUCTIONS

Every person who installs, uses or performs any operations of maintenance on the pump must be qualified and must have previously read this technical manual. Any temporary personnel must be supervised by skilled users. The order of execution of operations defined in this manual must be absolutely respected. Store this manual next to the pump so that it can be consulted at any time.

2.4 - CONDITIONS OF GUARANTEE

Tapflo offers a guarantee of 2 years on the pump's parts. Tapflo promises to repair or to replace for free all damaged parts except if their deterioration came from a poor use of the pump. This concerns all parts except for the hose, the clamps, the sleeves, seals, bushings and bearings as well as the pump shoes.

Tapflo will not be able to accept a request of guarantee under no circumstances if the used parts are not of Tapflo origin.

Any damaged parts covered by guarantee must be returned to the Tapflo factory or to the local Tapflo distributor. The returned parts must be accompanied with the duly filled and signed security form. A copy of this form is at the end of this manual. It must be appended in a visible way outside the packing. The potentially dangerous parts for health must be cleaned before returning them to the producer. It must be pointed out on the security form how parts were cleaned and those that have been decontaminated.


Tapflo is under no circumstances urged to respect guarantees given in its name by a third, whatever it is, representatives of Tapflo, subsidiaries and representatives including unless a specific agreement is written by a manager of Tapflo.

3/ DESCRIPTION

3.1 - IDENTIFICATION OF THE PUMP


Tapflo are identifiable by the pump plate located on the upper bracket. This one includes the type and serial number of the pump. This serial number leads to all information concerning building materials, nature of the hose, characteristics of the gearbox and characteristics of the motor. The gearbox as well as the motor include their own descriptive plate on which you can read the reduction ratio, power and electrical voltage etc.

3.2 - OPERATION PRINCIPLE

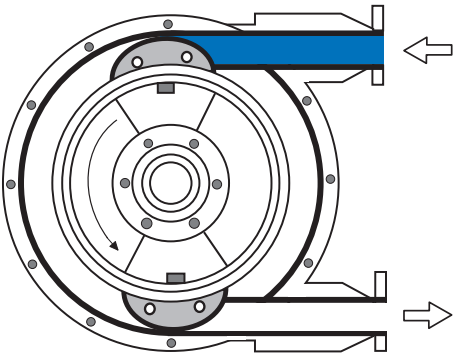


PHASE 1

The pump hose is compressed successively by two pressing shoes assembled on a rotating wheel. The first shoe, by pressing the walls of the hose, will create a vacuum and attract the pumped liquid into the hose.

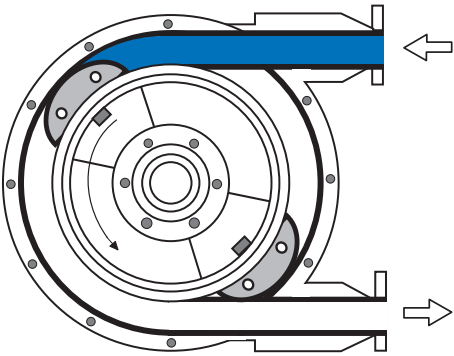

PHASE 2

The pumped liquid has now entered the hose. The second shoe will compress the hose and push the liquid towards the pump outlet.


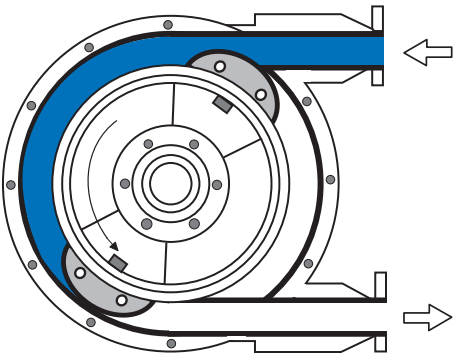


PHASE 3

As soon as, at the discharge side, the shoe is detached from the hose, the other shoe diametrically opposite is already in compression thus avoiding an internal product leakage. The product is then successively sucked and pushed due to the wheel rotation.

3.3 - PUMP CONSTRUCTION

3.3.1 - PUMPS PT05 TO PT20

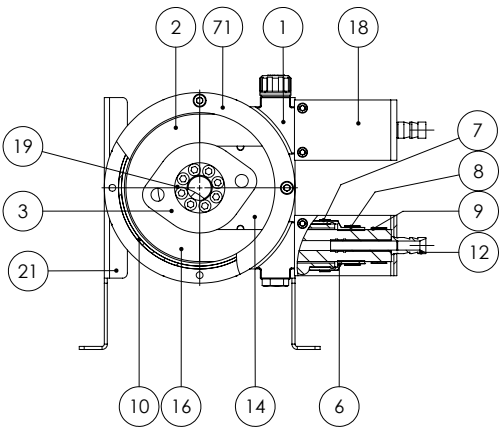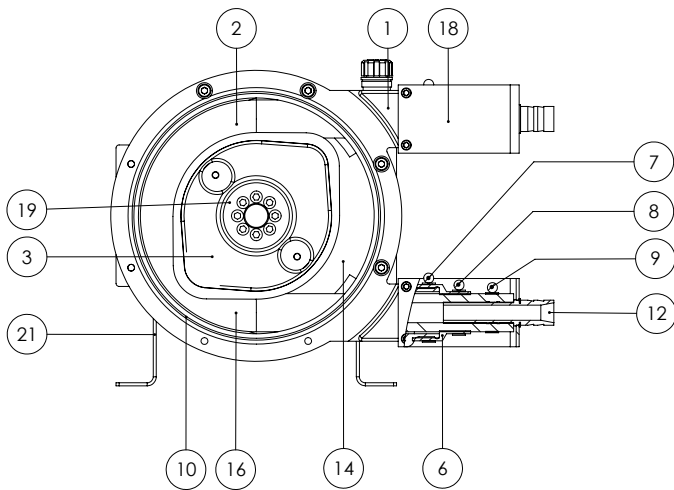


PUMP PT15 - 20

PUMP PT05 - 10


| PART NO | DESIGNATION | PT 05 - 10 | | PT15-20 |
|---------|---------------------|------------------------------------|--|------------------------------------|
| 1 | CASING | CAST IRON | | CAST IRON |
| 2 | COVER | LEXAN | | LEXAN |
| 3 | WHEEL | CAST IRON | | CAST IRON |
| 6 | SLEEVE | EPDM | | EPDM |
| 7 | CLAMP ON CASING | STAINLESS STEEL | | STAINLESS STEEL |
| 8 | CLAMP SLEEVE / HOSE | BICHROMATED STEEL | | BICHROMATED STEEL |
| 9 | CLAMP ON HOSE | BICHROMATED STEEL | | BICHROMATED STEEL |
| 10 | SEAL COVER | NITRILE | | NITRILE |
| 12 | INSERT | STAINLESS STEEL/PPH/PVDF | | STAINLESS STEEL/PPH/PVDF |
| 14 | LUBRICANT | GLYCERIN BLEND | | GLYCERIN BLEND |
| 16 | HOSE | NR/NBR/EPDM/NBR food/Viton/Hypalon | | NR/NBR/EPDM/NBR food/Viton/Hypalon |
| 18 | BRACKET | ELECTROPLATED STEEL | | ELECTROPLATED STEEL |
| 19 | HUB | STEEL | | STEEL |
| 21 | FRAME | ELECTROPLATED STEEL | | ELECTROPLATED STEEL |
| 71 | COVER FLANGE | ELECTROPLATED STEEL | | WITHOUT FLANGE |

3.3.2 - PUMPS PT25 TO PT65

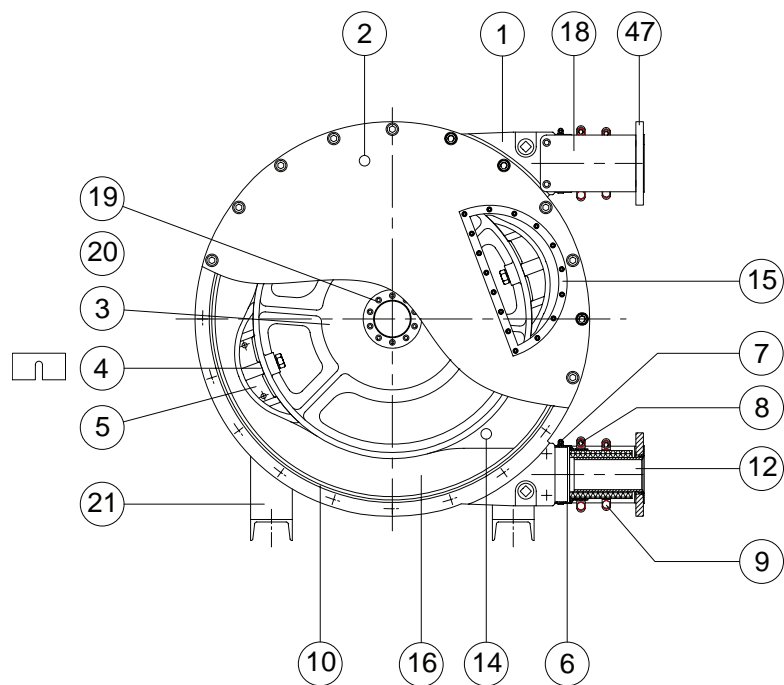

| PART NO | DESIGNATION | PT 25 - 32 - 40 | PTX 40 - 50 - 65 |
|---------|---------------------|------------------------------------|------------------------------------|
| 1 | CASING | CAST IRON | CAST IRON |
| 2 | COVER | ELECTROPLATED STEEL | STEEL |
| 3 | WHEEL | CAST IRON | CAST IRON |
| 4 | SHIM | GALVANIZED STEEL | GALVANIZED STEEL |
| 5 | SHOE | ALUMINIUM | CAST IRON |
| 6 | SLEEVE | EPDM | EPDM |
| 7 | CLAMP ON CASING | STAINLESS STEEL | STAINLESS STEEL |
| 8 | CLAMP SLEEVE / HOSE | STAINLESS STEEL | STAINLESS STEEL |
| 9 | CLAMP ON HOSE | STAINLESS STEEL | BICHROMATE STEEL |
| 10 | SEAL COVER | NITRILE | NITRILE |
| 12 | INSERT | STAINLESS STEEL/PPH/PVDF | STAINLESS STEEL/PPH/PVDF |
| 14 | LUBRICANT | GLYCERIN BLEND | GLYCERIN BLEND |
| 15 | SIGHTGLASS SEAL | LEXAN | LEXAN |
| 16 | HOSE | NR/NBR/EPDM/NBR food/Viton/Hypalon | NR/NBR/EPDM/NBR food/Viton/Hypalon |
| 18 | BRACKET | ELECTROPLATED STEEL | ELECTROPLATED STEEL |
| 19 | HUB | STEEL | STEEL |
| 21 | FRAME | STEEL | STEEL |
| 46 | SIGHT GLASS SEAL | NITRILE | NITRILE |
| 47 | INLET/OUTLET FLANGE | STAINLESS STEEL | STAINLESS STEEL |

3.3.3 - PUMPS PTX80 TO PT125

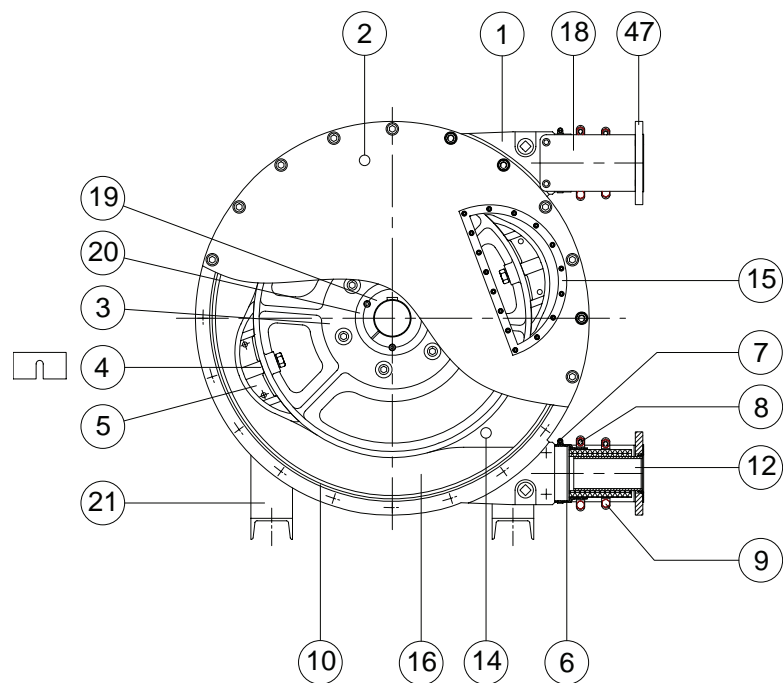

| PART NO | DESIGNATION | PTX 80 - PT80 | PT 100 - PT 125 |
|---------|---------------------|------------------------------------|------------------------------------|
| 1 | CASING | CAST IRON | CAST IRON |
| 2 | COVER | STEEL | STEEL |
| 3 | WHEEL | CAST IRON | CAST IRON |
| 4 | SHIM | GALVANIZED STEEL | GALVANIZED STEEL |
| 5 | SHOE | CAST IRON | CAST IRON |
| 6 | SLEEVE | EPDM | EPDM |
| 7 | CLAMP ON CASING | STAINLESS STEEL | STAINLESS STEEL |
| 8 | CLAMP SLEEVE / HOSE | STAINLESS STEEL | STAINLESS STEEL |
| 9 | CLAMP ON HOSE | BICHROMATE STEEL | BICHROMATE STEEL |
| 10 | SEAL COVER | NITRILE | NITRILE |
| 12 | INSERT | STAINLESS STEEL/PPH/PVDF | STAINLESS STEEL/PPH/PVDF |
| 14 | LUBRICANT | GLYCERIN BLEND | GLYCERIN BLEND |
| 15 | SIGHT GLASS | LEXAN | LEXAN |
| 16 | HOSE | NR/NBR/EPDM/NBR food/Viton/Hypalon | NR/NBR/EPDM/NBR food/Viton/Hypalon |
| 18 | BRACKET | ELECTROPLATED STEEL | ELECTROPLATED STEEL |
| 19 | HUB | STEEL | |
| 20 | BOLT ON PLATE | CAST IRON | |
| 21 | FRAME | STEEL | STEEL |
| 46 | SIGHT GLASS SEAL | NITRILE | NITRILE |
| 47 | INLET/OUTLET FLANGE | STAINLESS STEEL | STAINLESS STEEL |

3.4 - HOSE

The Tapflo hoses are manufactured according to very strict specifications to acquire the best performances of the pump and to assure an optimum hose life. They are available in six materials : Natural Rubber (NR), perbunan (NBR), EPDM, NBR food, Hypalon, and viton. The material of the hose must be compatible with the pumped liquid. Consult an Tapflo distributor to define the best hose for your process or consult the chemical resistance table on our website tapflo.com.

HOSE DIMENSIONS (dimensions in mm)

| PUMP | DISTANCE (L) |
|-------|--------------|
| PT05 | 400 |
| PT10 | 400 |
| PT15 | 500 |
| PT20 | 500 |
| PT25 | 800 |
| PT32 | 1000 |
| PT40 | 1000 |
| PTX40 | 1200 |
| PT50 | 1400 |
| PT65 | 1400 |
| PTX80 | 1600 |
| PT80 | 2000 |
| PT100 | 2800 |
| PT125 | 3000 |

| PUMP | Ø INSIDE | THICKNESS | LENGTH |
|-------|----------|-----------|--------|
| PT05 | 5 | 13.5 | 570 |
| PT10 | 10 | 11 | 570 |
| PT15 | 15 | 11 | 830 |
| PT20 | 20 | 9 | 830 |
| PT25 | 25 | 14,5 | 1090 |
| PT32 | 32 | 15,5 | 1300 |
| PT40 | 38 | 13,5 | 1300 |
| PTX40 | 40 | 13,5 | 1500 |
| PT50 | 51 | 15 | 1820 |
| PT65 | 60 | 13,5 | 1850 |
| PTX65 | 65 | 17,5 | 2335 |
| PTX80 | 80 | 17,5 | 2400 |
| PT80 | 80 | 21,5 | 2910 |
| PT100 | 100 | 22 | 3410 |
| PT125 | 125 | 21,25 | 4000 |

3.5 - GEARBOX

Our standard gearboxes are coaxial gearboxes for pumps PT05 to PTX40 and planetary for pumps PT50 to PT100. PT125 can be equipped with both. They have been sized according to the important radial loads of the pump. Consult the gearbox maintenance manual provided with the pump to know the quantity of lubricant requested as well as the periodicity of oil change.

3.6 - ELECTRICAL MOTORS

The standard motors provided on our pumps are squirrel-cage motors and have a 220/400 & 400/660V 50Hz tri-phase voltage.

If the pump has to work in a potentially explosive environment, please refer to the complementary information on ATEX compliances and contact your Tapflo distributor.

3.7 - AVAILABLE OPTIONS

Tapflo offers several options for their pumps :

- Hose rupture detector.
- Revolution-counter.
- Pulsation dampener.
- Air vacuum assistance (for highly viscous liquids).

Please contact your Tapflo distributor for any information about these different options.
IOM manual PT & PTS peristaltic pumps

4/ INSTALLATION

4.1 - UNPACKING AND CONTROL

During the reception of the pump, please follow the indications pointed out on the packing. Undertake a visual control to be sure that no damage happened during the transport. If this is the case, please contact your Tapflo distributor as soon as possible.

4.2 - CONDITIONS OF USE

PT pumps can work in atmospheres where the temperature is situated between - 20°C and +45°C. Pumps are delivered painted with a 150μ polyurethane paint which allows them to resist to certain aggressive ambiances. They are designed for indoor and outdoor setups.

4.3 - SET UP

Before installing the pump, check the following points :

- The pump is delivered with a frame provided with four anchoring holes. It must be fixed on a solid base with a slope which does not exceed 5mm for 1m and must be firmly fastened to this one.
- Require enough space around the pump to carry out maintenance. If such was not possible, consider the moving of the pump to a space provided for this purpose.
- Make sure that the room is adequately ventilated to relieve the heat generated by the pump. Leave a space behind the motor ventilator hood so as not to obstruct air intake.

4.4 - PIPING

Suction line piping :


- The internal diameter of the piping must be superior to that of the pump hose (see §3.4.).
- It must be the shortest and most direct possible to avoid suction loss.
- Install a valve on the suction line especially if the pump is on load.
- Limit the presence of bends and make sure that they are as large as possible.
- Make sure that piping can support the service pressure of the pump.

Discharge line piping :

- The internal diameter of piping must be superior to that of the pump hose (see §3.4.).
- It must be the shortest and most direct possible to avoid discharge pressure loss.
- Limit the presence of bends and make sure that they are as large as possible.
- Provide a space for a pulsation dampener (see picture below).
- If there is a valve on the discharge line, install a pressure valve or a over pressure protection gauge to avoid any possible damage to the pump and to the installation.
- It is recommended to install a Dillatoflex® pipe to absorb vibrations created by the pump pulsations.

During the pump ground study, provide enough space for the hose change as well as the possible installation of a pulsation dampener.

Distance (L) is the required length for hose removal.

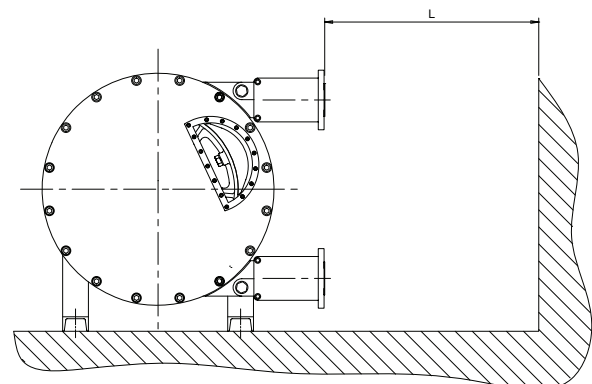

4.5 - LIFTING THE PUMP

Pumps are provided with two lift rings fitted on the upper part of the frame. While lifting the pump, respect the following points :

- Lift the complete hose pump using the lifting rings plus additional support on the gearbox and the motor using suitably rated straps or slings.
- Never exceed the upper limits of lift and control the motorized pump weights in the table below.
- The motorized pump, given its centre of gravity, will tend to overbalance on the pump head side. Make sure that the persons are at a security distance of the pump to avoid any risk of wound.
- Never raise the pump otherwise than by the pump’s lifting rings.
- Never raise the pump by its orifices nor by its brackets.

| PUMP | PT05-10 | PT15 | PT20 | PT25 | PT32 | PT40 |
|-----------|---------|------|------|------|------|------|
| WEIGHT KG | 25 | 35 | 35 | 80 | 130 | 145 |

| PUMP | PTX40 | PT50 | PT65 | PTX80 | PT80 | PT100 | PT125 |
|-----------|-------|------|------|-------|------|-------|-------|
| WEIGHT KG | 210 | 315 | 335 | 650 | 930 | 1250 | 1750 |

5/ PUMP START-UP

5.1 - PREPARATIONS

- a. Connect the electrical motor in accordance with the local rules and regulations. Perform this work by qualified personnel.
- b. Make sure that the lubricant level arrives at the level of the sight glass. Add lubricant if required by the breather or by the sight glass (see §6.1.).
- c. Make sure the shimming of the pump is according to the pump process (see §6.5 shoe shimming).
- d. Check the direction of rotation of the pump. It is recommended to install a rotation inverter on the motor for the hose change.

5.2 - START-UP


- a. Install piping at the inlet and outlet of the pump.
- b. Make sure that valves at the inlet and outlet are opened.
- c. Start the pump by checking its direction of rotation by the sight glass.

6/ MAINTENANCE

6.1 - EMPTYING AND FILLING OF THE LUBRICANT

Refer to §6.6 to know the periodicity of lubricant change.

- 1 - Stop the pump.

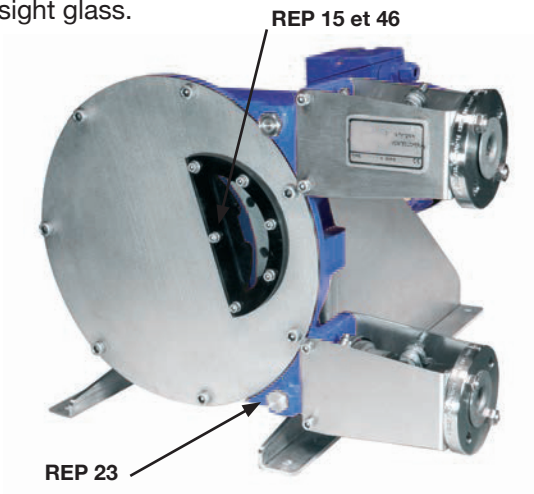

- 2 - Place a tray underneath the drain plug REF23.
- 3 - If necessary, install a tap and a drain circuit instead of the drain plug REF23.
- 4 - Make sure that this tray can contain the quantity of lubricant during the drainage process (see lubricant volume table §9.5).
- 5 - Unscrew the plug REF23 and undertake emptying.
- 6 - Position and tighten the plug REF23 by applying Teflon® band or waterproof paste or close the drain tap.




NOTE : If the pump is mounted with the inlet/outlet positioned upwards, lubricant drainage is obtained by unscrewing some cover screws in the lower part.

- 7 - Remove the sight glass REF15 as well as its seal REF46 and fill the casing with the Tapflo lubricant (see lubricant table §9.5.). You can also fill the casing by the breather cap REF52 situated at the back of the pump casing. The required lubricant level is underneath the bottom edge of the sight glass (see photo beneath).

FOR MODELS PT05, 10, 15 and 20 :

Unscrew higher breather plug REF52 of the pump. Place a funnel inside the plug hole and fill the casing with the Tapflo lubricant (see lubricant table §9.5.). The necessary volume of lubricant is just underneath the shaft line.

- 8 - Check the state of the seal REF46 and reassemble the sight glass REF15 or tighten the breather cap REF52.

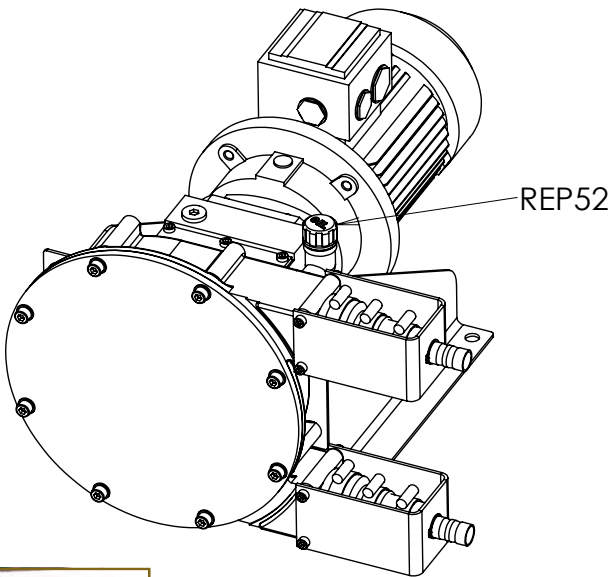

MAX LEVEL



6.2 - HOSE CLEANING

The hose cleaning can be done without removing the hose. It can be done with water or with a cleaning liquid (check compatibility with hose material). With numerous products, it is necessary to clean the hose after every pumping in order to avoid the hardening of the product inside this one.



CAUTION ! Make sure that the cleaning liquid temperature is adapted to the hose material.

6.3 - HOSE REPLACEMENT



CAUTION ! Before any hose change, check the following points :

- a. This service has to be performed by skilled personnel that is acquainted with this manual.
- b. Isolate the pump from the power supply. Inlet and outlet valves have to be closed to minimize product loss.
- c. Always carry clothes and necessary protection according to the pumped product.
- d. Respect all security and enviromental rules necessary for the manipulation of the pumped product.

6.3.1 - HOSE REMOVAL

- 1 - Disconnect and remove the suction and discharge piping.
- 2 - Drain the lubricant as explained in §6.1.
- 3 - At the suction end, loosen clamps REF8 and 9 (photo 1).
Extract the insert REF12 and remove the flange REF47 (photo 2).

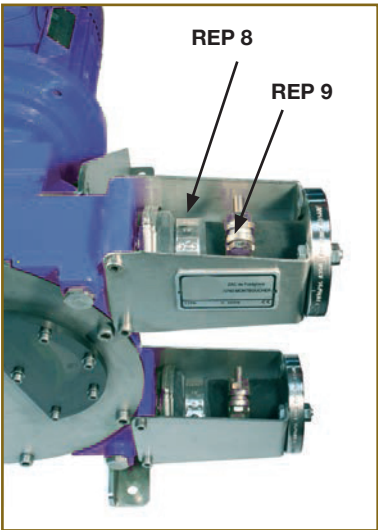


PHOTO 1

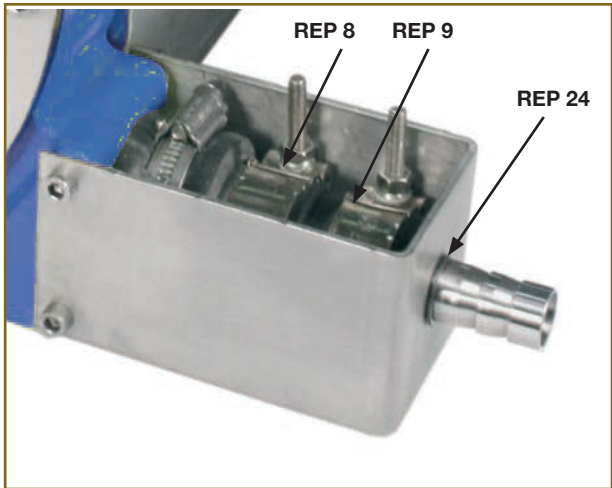


PHOTO 3

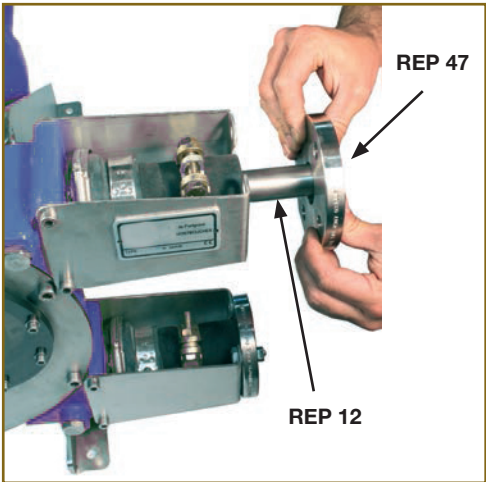


PHOTO 2

FOR MODELS PT05, 10, 15 and 20 :

Remove circlips REF24 and dismantle bracket REF18. Extract insert REF12.

4 - At the discharge end, loosen clamps REF8 and 9. Extract the insert REF12 and remove the flange REF47 as well as the brackets REF18 (photograph 4). Remove clamps REF8 and 9 (photograph 5).

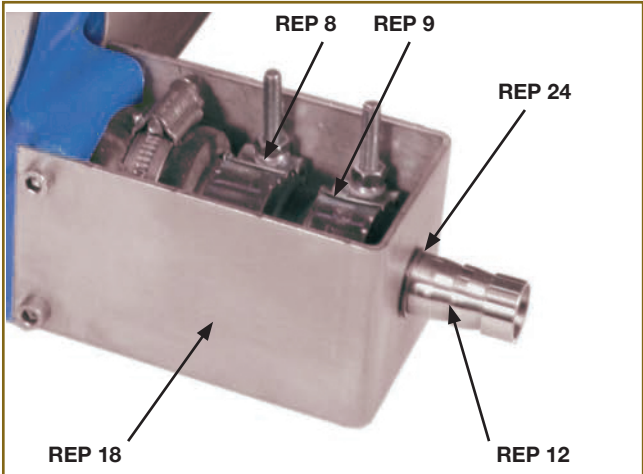


PHOTO 7

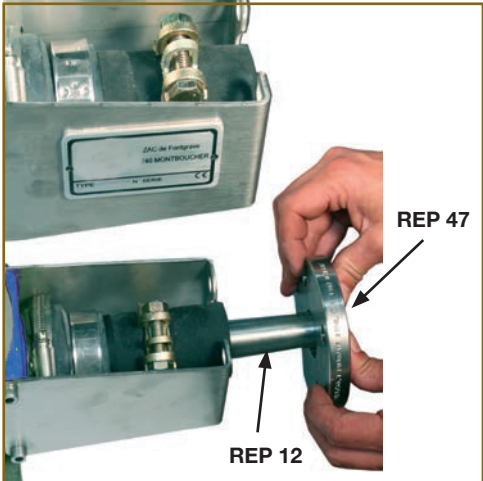


PHOTO 4

FOR MODELS PT05, 10, 15 et 20 :

At the pump outlet, loosen clamps REF8 and REF9. Remove circlips REF24 and dismantle bracket REF18. Extract insert REF12. Remove clamps REF8 and REF9.

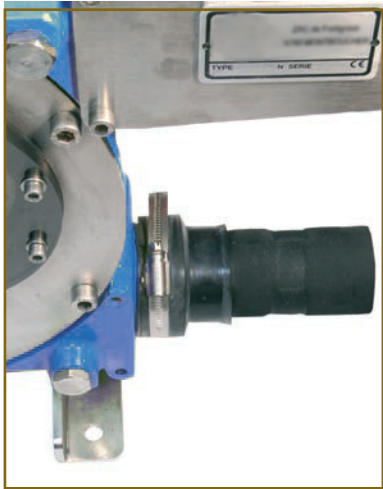


PHOTO 5

5 - Jog run the motor to deliver the hose from the pump casing at the outlet side.



WARNING ! The hose can come out of the pump casing very fast and cause harm. Check that nobody is in front of the pump's orifices while removing the hose.

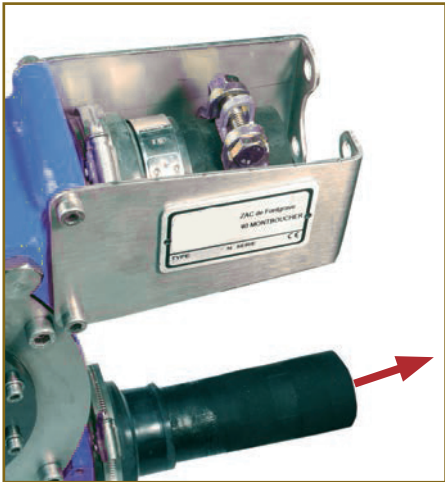


PHOTO 6

6.3.2 - PUMP CASING CLEANING

This operation is necessary when a hose has burst and when the product has contaminated the inside of the pump casing.

1 - Unfasten cover screws by leaving two screws partly fastened to the casing. Slightly withdraw the cover from the casing and fix a shackle in one of the cover's highest fastening holes (see picture below). Pumps PT80, 100 and 125 are equipped with a lifting ring. Install a lift equipment in this shackle and slightly raise the cover. Unfasten the remaining screws and withdraw the cover.

2 - Check the state of the cover seal REF10 and replace if necessary.

3 - Check the state of wear of the pressing shoes REF5 and replace them if necessary (see §6.4 Replacement of spare parts).



CAUTION ! A wear of shoes can cause problems to the pump and provoke abnormal hose lifetime.


4 - In the case of a hose burst, it is possible that the shaft seal REF26 as well as the seal ring REF27 have been notably damaged when pumping an abrasive liquid. Relate to §6.4 if a replacement of these parts is necessary.

5 - Wash the casing with clear water and withdraw any residues.

6 - Dry the pump casing entirely.

7 - Replace the cover seal in its groove.

8 - Reassemble the pump cover.

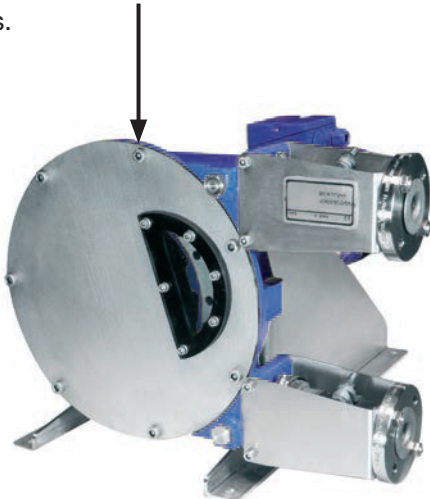

6.3.3 - REASSEMBLY OF THE HOSE



WARNING ! You should never assemble a new hose without a mounted cover.

1 - Pre-assemble the flange REF47 at the inlet port with two bolts (photo 1).

FOR MODELS PT05, 10, 15 and 20

Temporarily mount the bracket REF18 at the inlet port.

2 - Clean the new Tapflo hose carefully. Slightly coat it with Tapflo lubricant. Slightly lubricate the inside of the sleeve REF6

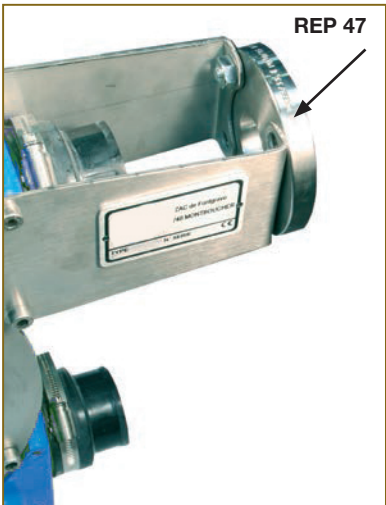


PHOTO 1

3 - Insert the hose by the outlet port REP6 (Photo 2).

4 - Reverse the direction of rotation of the motor.

5 - While pushing on the hose, jog run the motor and check the direction of rotation.

6 - The shoes mounted on the wheel are going to “swallow” the hose and push it out of the inlet port. Always by giving jolts, bring the hose against the flange REF47 (photo 3).

7 - Assemble the clamps REF8 and 9 on the inlet side. Mount the insert REF12 into the hose. Tighten clamps REF8 and 9.

FOR MODELS PT05, 10, 15 and 20

Dismantle the bracket REF18. Mount clamp REF8 and 9 on the hose. Mount the insert REF12 into the hose. Fix bracket REF18 and block the insert with circlips REF24. Tighten the clamp REF 8 and 9.

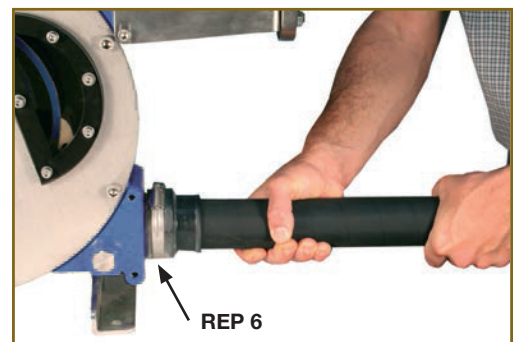


PHOTO 2



If you meet difficulties in introducing inserts into the pump hose, coat them slightly with Tapflo lubricant. Never use another lubricant.

8 - Assemble the brackets REF18 and pre-assemble flange REF47 on the outlet side with two temporary bolts.

FOR MODELS PT05, 10, 15 and 20

Assemble the bracket REF18 at the outlet side.

9 - Reverse the direction of rotation of the motor.

10 - Jog run the motor to bring the hose against the discharge flange.

11 - Undertake operation 7 at discharge side.

12 - Fill the pump with the necessary quantity of Tapflo lubricant (see §6.1. and §9.5.).

13 - Take away the temporary flange bolts and fix the piping on both suction and discharge sides.

14 - Open the valves at the suction and discharge sides.

15 - Check the direction of rotation of the pump. Check for any possible lubricant leakage by the inserts, sleeves or cover.

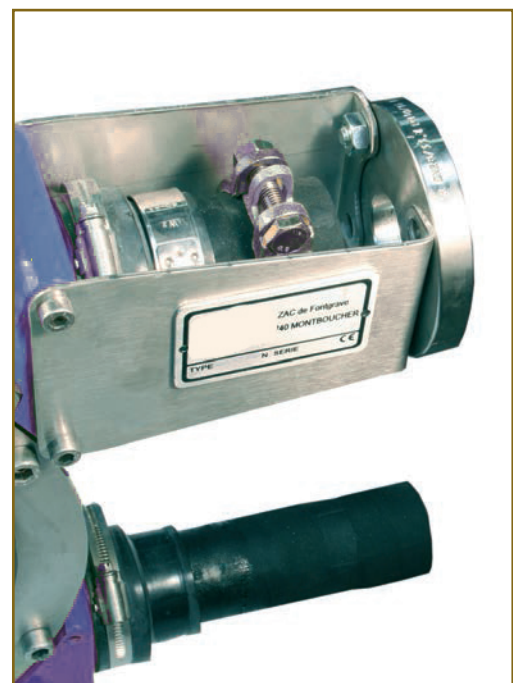


PHOTO 3

6.4 - REPLACEMENT OF SPARE PARTS

6.4.1 - REPLACEMENT OF PUMP SHOES (EXEPT PT05, 10, PT15, PT20)

- 1 - Jog run the motor and position one of the shoes in front of the sight glass.
- 2 - Cut the power supply.
- 3 - Drain the lubricant (see §6.1).
- 4 - Remove the pump cover REF2 as well as the cover seal REF10.
- 5 - Disassemble the shoe which is not in contact with the hose and put aside the shims if any. Check that the pin REF30 is still on the wheel (PT25 to PTX80).
- 6 - Mount a new shoe on the wheel (do not to forget the washer REF29). Slide the shims between the shoe and the wheel before tightening.




CAUTION ! Be careful of the position of the shoe with the centring pin REF30 (PT25 to PTX80).

- 7 - Tighten the shoe onto the wheel.
- 8 - Reassemble the cover with 3 temporary bolts disposed at about 120° between each other.
- 9 - Jog run the motor 180° to bring the second shoe in front of the sight glass.
- 10 - Remove the cover once again and undertake operations 5 - 7.
- 11 - Reposition the cover and tighten all cover screws.



6.4.2 - REPLACEMENT OF THE SEAL RING REP27 AND THE SHAFT SEAL REP26

Tapflo hose pumps are equipped with a leakage channel that allows to see the wear of the seal ring or the shaft seal. This channel is at the back of the pump casing underneath the gearbox flange. It also protects the gearbox seals by leaving the lubricant or the product to pass freely at the back of the pump casing.

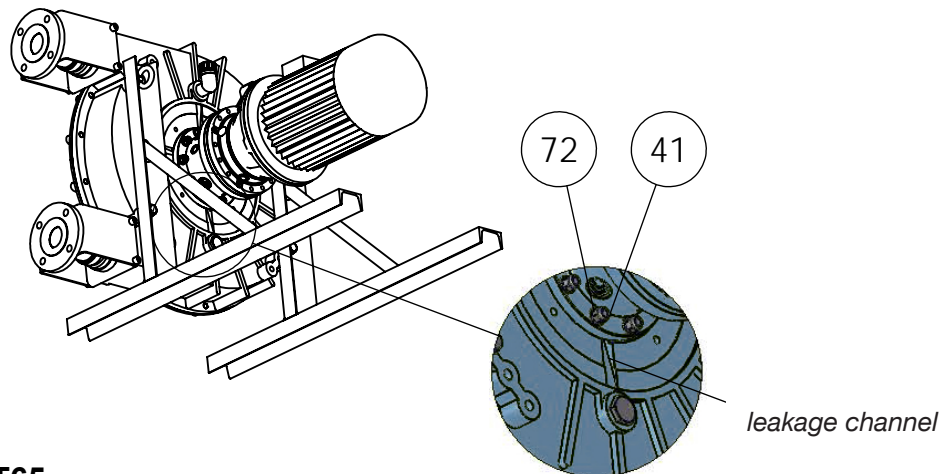

PUMPS PT05 up to PT65


(refer to the nomenclature §9.3. for the landmarks of parts).

- 1 - Isolate the pump from the power supply.
- 2 - Empty the lubricant and clean out the pump (see §6.1).
- 3 - Remove the pump hose (see §6.3.1).
- 4 - Disassemble the pump cover and withdraw the cover seal REF10.
- 5 - Disassemble the wheel by unscrewing the expansible hub REF19.
Refer to section 9.10 for expansible hub assembly and disassembly.
- 6 - Withdraw the wheel of the pump shaft with a suitable lifting equipment.
- 7 - Support the gear motor with a suitable lifting equipment.
- 8 - Unscrew the nuts REF41 and withdraw the gearbox from the pump casing.
- 9 - Extract the damaged seal ring REF27.
- 10 - Slip on the spacer ring REF73 if necessary and glue to the shaft. Position the new seal ring REF27 against the spacer ring or the gearbox shaft's shoulder. Fill the gap between the keyway and the seal ring with silicone mastic to ensure correct.




For Pumps PT100 and PT125 the wheel is automatically positioned by the spacer ring and seal ring. Therefore, no adjustment is necessary.

- 11 - Withdraw the shaft seal REP26 with a drift punch.
- 12 - Replace a new shaft seal REF26 with an appropriate tool (wooden or plastic cylinder). Check the mounting position of the seal (opened side turned to the cover).

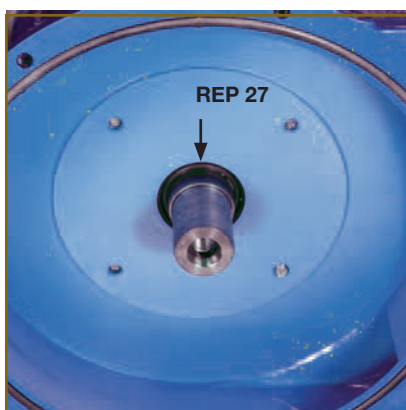

13 - Mount the gear motor on the casing being careful not to damage the shaft seal. Tighten the nuts REF41 with their washers REF72.

14 - Mount the wheel and hub on the pump shaft by positioning it referring to the table and the drawings below

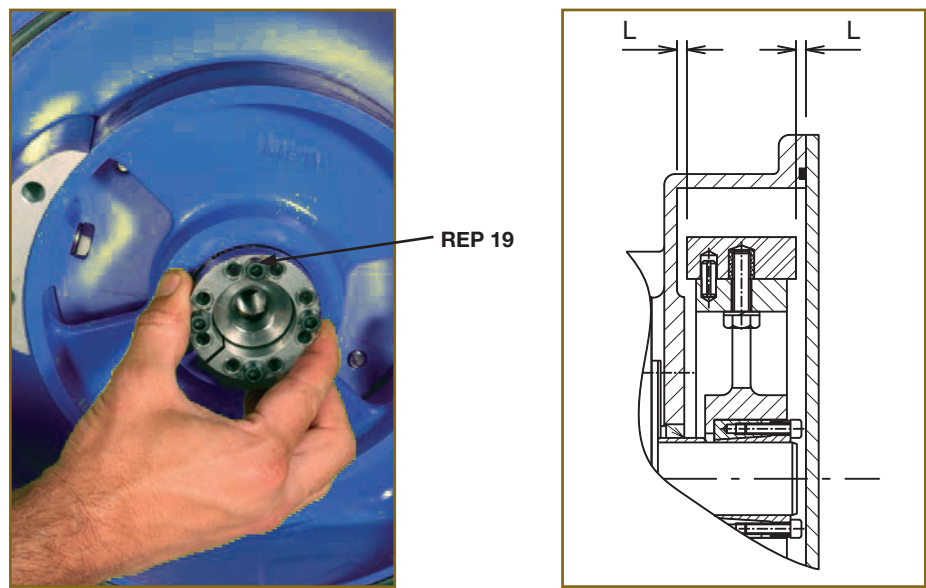

| PUMP | PT 05 - 10 | PT 15 - 20 | PT 25 | PT 32 | PT 40 | PT X40 | PT 50 - 65 | PT X80 | PT 80 | PT 100 | PT 125 |
|----------------------------|---------------|---------------|----------|----------|----------|-----------|---------------|-----------|----------|-----------|-----------|
| Distance casing / shoe (L) | 4 mm | 2,75 mm | 5,5 mm | 6 mm | 2,5 mm | 5 mm | 3 mm | 6,5 mm | 8 mm | 10 mm | 15 mm |
| Tolerance + or - | 0,5 mm | 0,5 mm | 0,5 mm | 0,5 mm | 0,5 mm | 0,5 mm | 0,5 mm | 0,5 mm | 0,5 mm | 0,5 mm | 0,5 mm |

15 - Cross tighten the expansible hub with a dynamometric spanner to the correct torque figures- Check the wheel position once again and re-adjust if necessary. Refer to section 9.10 for expansible hub assembly and disassembly.




| PUMP TYPE | TORQUE Nm |
|-------------------|-----------|
| PT05-10-15-20 | 12 |
| PT25-32-40 | 13 |
| PTX40 | 27 |
| PT50-65 | 35 |
| PTX80 | 110 |
| PT80 (shaft Ø90) | 110 |
| PT80 (shaft Ø100) | 190 |

16 - Mount the cover seal REF10 in its groove and mount the cover.

17 - Mount the pump hose as stated in §6.3.3.

PUMPS PTX80 and PT125 (refer to the nomenclature for the landmarks of parts §9.3.)

- 1 - Undertake the same operations 1 to 10 as for pumps PT05 to PT65.
- 2 - Disassemble the seal flange REF25 and withdraw the damaged shaft seal with a screwdriver or a similar tool.
- 3 - Take the new shaft seal REF26 between the thumb and the index and by tightening your fingers, form an “8” figure. The seal can now be inserted into its groove by respecting the mounting position (see drawing).
- 4 - Mount the gear motor on the pump casing (see operation 13).
- 5 - Replace the O ring REF67 if necessary and reassemble the seal flange.
- 6 -For pumps PTX80 and PT80, undertake operations 14 to 17 of previous chapter. For pumps PT100 and PT125, undertake operation 14 of previous chapter. Then block the wheel with the washer REF60 and the screw REF59 and finish with operations 16 and 17 of previous chapter.

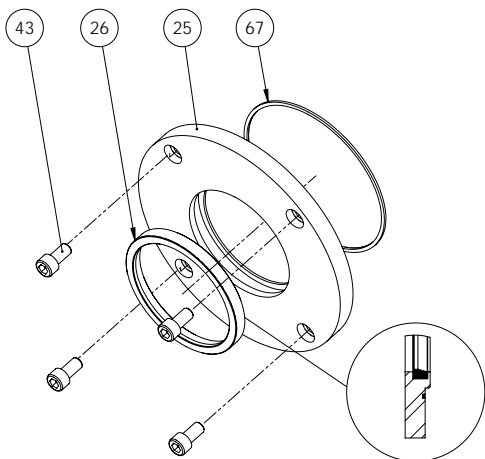

6.5 - SHOE SHIMMING



NOT : *this paragraph does not concern pumps PT05 to PT20.*



CAUTION ! The shimming of shoes is an operation which consists in adding shims under the shoe to stop any internal leakage. An internal leakage considerably reduces the life time of the hose as well as the flow. As a result, it is essential to adjust the shoe's shimming according to the rotation speed of the pump, the desired discharge pressure and the liquid viscosity.



WARNING ! Never run the pump without the sight glass.



The shoe shimming can be made without disassembling the hose or the cover. Shims are inserted or withdrawn by the sight glass as pointed out below :

- 1 - Jog run the motor and bring a shoe in front of the sight glass.
- 2 - Cut the power supply of the pump.
- 3 - Unscrew the sight glass bolts and withdraw taking care in not damaging the seal.
- 4 - Slightly unscrew the shoe's fastening bolt(s) and lift the shoe off the wheel with a screwdriver or a similar tool.
- 5 - You can now either slide in or withdraw the necessary number of shims under the shoe.



Consult the shimming table §9.6 to determine the precise number of shims according to your application.

- 6 - Tighten the shoe bolts.
- 7 - Reassemble the sight glass with its seal.
- 8 - Re-connect and jog run the motor to bring the second shoe in front of the sight glass.
- 9 - Cut the power supply of the pump.
- 10 - Repeat operations 3, 4, 5, 6 and 7. Replace the sight glass seal REF46 if necessary.

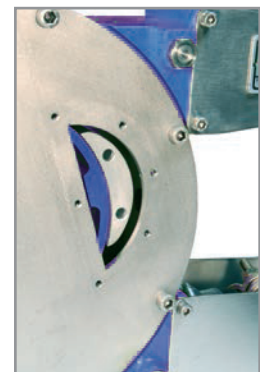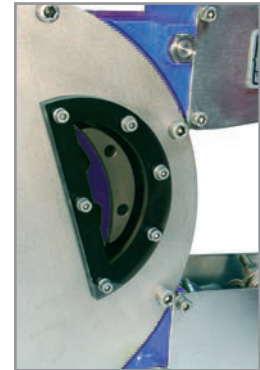

6.6 - MAINTENANCE AND PERIODIC INSPECTIONS PT AND PTS SERIES

| | | | |
|----|--|--|---|
| 1 | Pump hose replacement. | In prevention, change the pump hose after 90 % of the life time of the first hose. | see §6,3 |
| 2 | Lubricant replacement. | At the end of two hose changes or 5000 hours of functioning. Otherwise, in every hose break. | see §6,1 |
| 3 | Gearbox oil replacement. | Refer to the gearbox maintenance manual provided with the pump. | |
| 4 | Replacement of the seal ring REF27. | In case of presence of lubricant in the leak channel. | see §6,4,2 |
| 5 | Replacement of the shaft seal REF26. | In case of presence of lubricant in the leak channel. | see §6,4,2 |
| 6 | Replacement of the shaft seal REF105 and REF106 (PTS series). | In case of presence of oil in the leak channel or at the lip seals. | see §6,4,2 and §6,6 |
| 7 | Replacement of the shoes. | If these are worn on the contact surface. | see §6,4,1 |
| 8 | Replacement of the cover seal REF10. | In the case of a leak around the pump cover. | see §6.3.2 |
| 8 | Replacement of the sleeves REF6. | If these are damaged. | Refer to §6,3. Perform operations 1, 2, 3 and 4 of §6,3,1 and change sleeves. Respect directives of security. |
| 9 | Replacement of the bearings REF103 and REF104 (PTS series) | If there are abnormal noises coming from the bearing case. | see §6,4 and §6,6 |
| 9 | Check the lubricant level. | Before starting the pump and periodically during the pump service. | see §6,1 |
| 10 | Check for lubricant leakage at the leakage channel. | Before starting the pump and periodically during the pump service. | see §6,4 |
| 11 | Check the pump casing to discern possible leakages around the cover, the sight glass, the flanges and the sleeves. | Before starting the pump and periodically during the pump service. | |
| 12 | Check for wear on the shoe's pressing surface. | At every hose change. | see §6,4 |
| 13 | Check the presence of a gearbox oil leakage. | Before starting the pump and periodically during the pump service. | see §3.5 |
| 14 | Check for strange noises coming from the pump, gearbox and bearing case or abnormal pump casing temperature. | Periodically during the pump service. | |

6.7 - PTS SERIES COMPLEMENTARY INFORMATION

6.7.1 - SET UP

Before the setup of the pump, check the following points :

- The PTS pump is delivered without a frame. Assembly holes are at the back of the pump for assembly on a frame. Dimensions of these assembly holes can be found in § 9.2 I. The pump with its drive and frame must be fixed to a solid base with a slope which does not exceed 5mm for 1m and must be firmly fastened to this one.
- The pump frame must be built in order to support the stress and deformations delivered by the pump and drive. It should be built by qualified staff with good engineering practice. In no case Tapflo AB is responsible for its construction or conception.
- The alignment of pump and drive shafts must be made in accordance with instructions given by the manufacturer of the coupling. Refer to the specific notice of such material. To achieve alignment and coupling, use a perfectly straight ruler to control the misalignment, and a feeler gauge for angular misalignment. Control four points (top, bottom, left, right) at each stage of the installation (after setting on foundations, after fixing pipes and after a first start).
- Make sure there is enough room around the pump to carry out maintenance. If that was not the case, envisage the moving of the pump in a space provided for this purpose.
- Make sure the room is adequately ventilated to relieve the heat generated by the pump. Leave a space behind the motor ventilator hood so as not to obstruct the air intake.

6.7.2 - PUMP STARTING

Follow the steps described in §5. The hose is not mounted on bare shaft pumps when delivered. Therefore, hose mounting operations should be followed before the starting up.

6.7.3 - BEARING CASE DISMANTLING AND LIP SEAL POS26 REPLACEMENT

Carry out operations described in §6.4.2. Disassemble the bearing case in the same way as for the gearbox.

- 1 - Remove lip seals POS105 and POS106 from the bearing case.
- 2 - Remove the circlips POS 107.
- 3 - Remove the shaft with the bearings.
- 4 - Carry out the disassembly of the bearings and replace them together with the shaft POS102 if necessary.
- 5 - Remonte the shaft and the bearings, circlips and O rings. Feel up the bearing box with grease through the greaser positioned on the top of the box.

6.7.4 - MAINTENANCE AND PERIODICAL CONTROLS

Regularly check the absence of grease coming from the leakage channel or from the lip seal POS106.

7/ STORAGE

7.1 - STORAGE OF THE PUMP

Store the pump in a sheltered and dry place and ensure that the storage room temperature is between - 20°C and +45°C. Protect the pump if necessary and block the inlet and outlet orifices : if the pump stays without working more than 1 month, withdraw the hose from the pump or withdraw one of the shoes as well as its centring pin and position the wheel so that the second shoe can be seen through the sight glass. For models PT05-10-15-20, position the wheel so that one of the cam lobes remains submerged in the lubricant. If you can neither withdraw the hose or one of the shoes, run the pump 5min a week.

7.2 - STORAGE OF THE PUMP HOSES

Hoses must be stored sheltered from light in a cool place. Their life is reduced after two years. The performance of hoses is reduced at the end of this expiry date due to the ageing of rubber.

8/ TROUBLESHOOTING.







| PROBLEM | POSSIBLE REASON | RESOLUTION |
|--------------------------|--|--|
| The pump does not work | No power supply. | Check that the pump power switch is on position "ON". |
| | | Check the connection of the motor. |
| | The wheel of the pump stalls. | Check the fixing of the hose. |
| | | Check that the discharge pressure is not too high. |
| | | Check that the product hasn't sedimentated in the hose. |
| | The lubricant level detector has been operated. | Check the reason for which the level detector has been operated. Check the correct functioning of this one. If the pump hose has bursted, undertake the replacement of the pump hose. |
| Low capacity or pressure | Not enough Shims under shoes. | Add the sufficient number of shims. |
| | Air leak at the inlet of the pump. | Check the tightening of the clamps of the pump and the sealing of the inlet piping. |
| | Valve closed or partly closed at inlet. | Fully open the valve. |
| | Wear of the hose. | Replace the hose. |
| | Product too viscous or too high pump speed in comparison with the product viscosity. | Ask for advice from your Tapflo distributor. |
| | Piping blocked or partly blocked at inlet. | Unblock piping at inlet and make sure of the good flow of the product. |

(8/ TROUBLESHOOTING.)

| PROBLEM | POSSIBLE REASON | CORRECTION |
|--|--|---|
| Hose life is too short. | Incompatibility of the hose with the pumped product. | Make sure the compatibility of the hose with your product and contact your Tapflo distributor. |
| | Discharge pressure too high. | Check that the discharge pressure of the pump does not exceed 15 bars (or 8 bars for PT05 to PT20). Check that the outlet piping is not blocked up and that all valves are opened. Make sure that the security valve works correctly. Make sure that the piping friction losses do not exceed the value requested for an appropriate functioning of the pump. |
| | Pump speed too high. | Reduce the pump speed. |
| | Wrong shimming. | Check the shimming. |
| | Too high temperature of the product. | Contact your Tapflo distributor. |
| Lubricant leakage around the cover | Deficient tightening of cover bolts. Wear of the cover seal. | Tighten cover bolts. Replace cover seal. |
| Lubricant leakage in the leakage channel (underneath the gearbox flange) | Wear of the shaft seal or the seal ring. | Replace these parts. |
| Lubricant leakage at the sleeves | Deficient tightening of clamps or spoilt sleeve (s). | Tighten clamps or replace sleeves. |
| Pulsations in piping. | Deficient fastening of the piping. | Fix piping correctly. |
| | Process creating important pulsations due to the product, the speed of the pump, discharge pressure or the sizing of piping. | Contact your Tapflo distributor. |
| Greasee leakage (PTS series). | Worn lip seals | Remplace the lip seals REF105 and REF106. See §6.4 and §6.6. |
| Abnormal noise coming from the bearing case (PTS series). | Lack of lubricant in the bearing case. Worn bearings. | Refill the bearing case with appropriate greasee. Replace bearings. See §6.4 and §6.6. |





9/ CHARACTERISTICS AND TECHNICAL SPECIFICATIONS

9.1 - PERFORMANCES CURVES

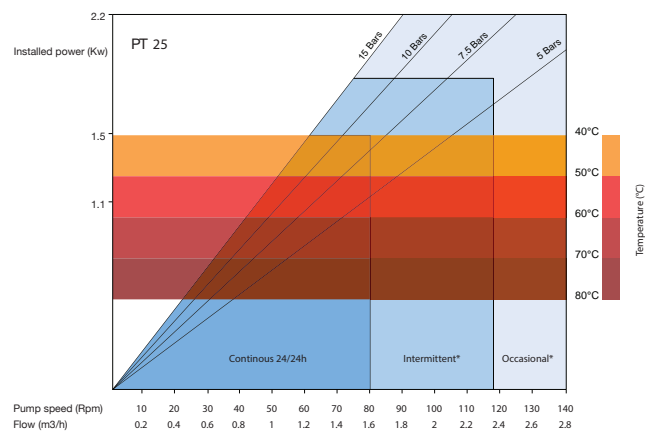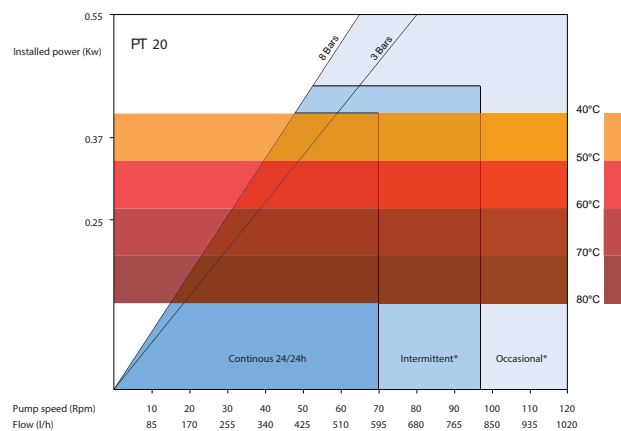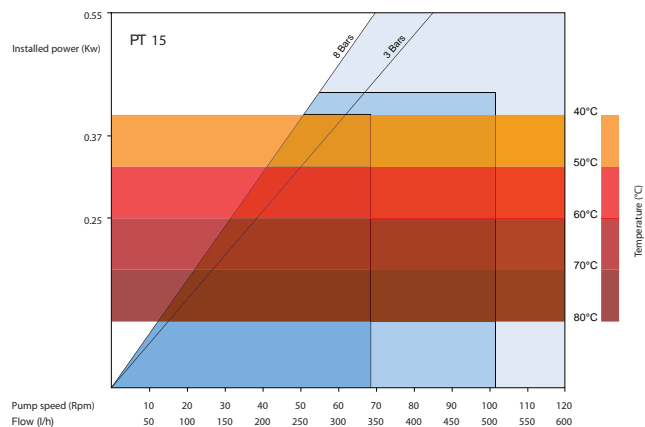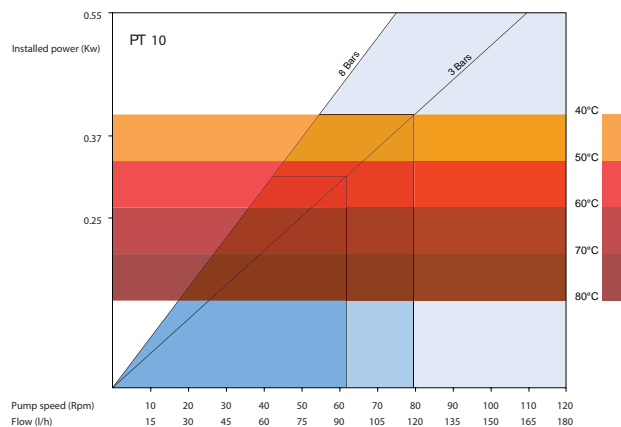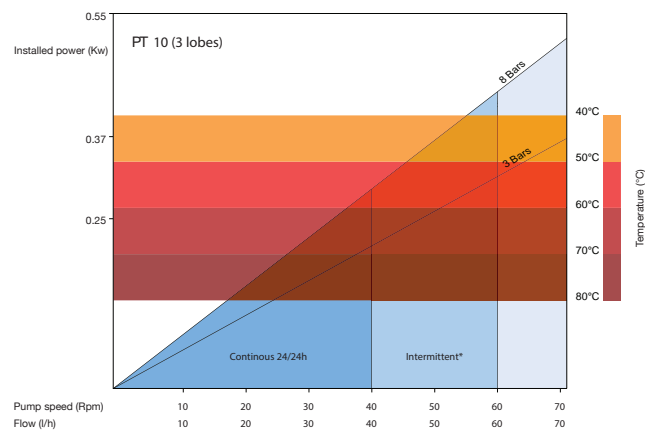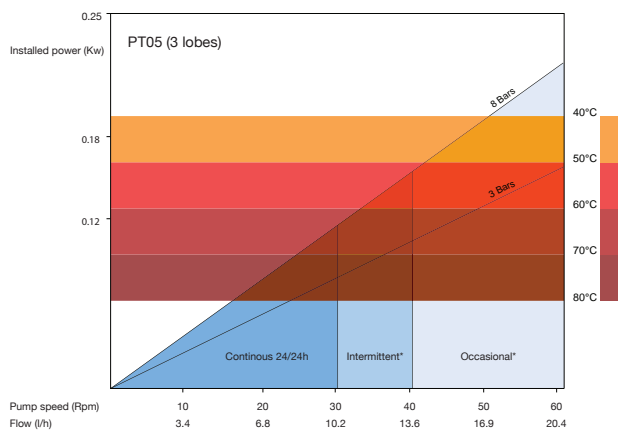






(9/ CHARACTERISTICS AND TECHNICAL SPECIFICATIONS)

9.1 - PERFORMANCES CURVES

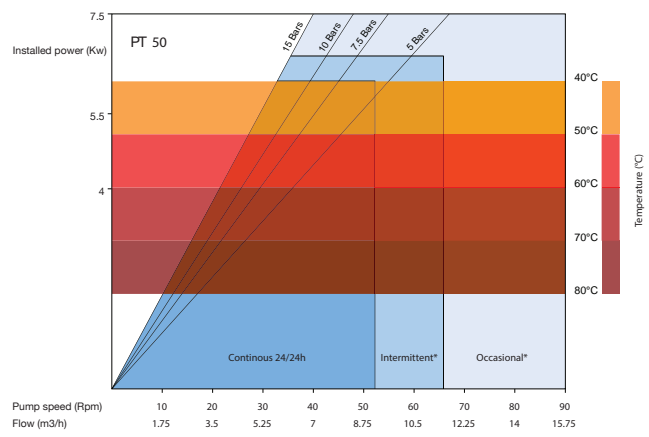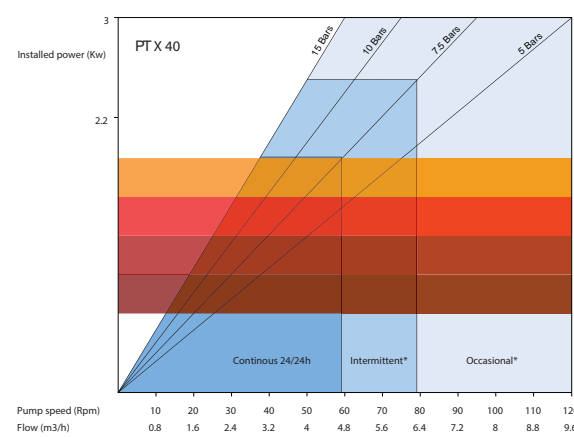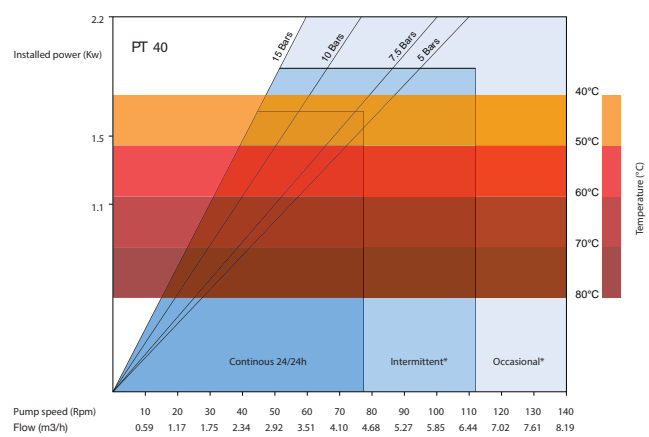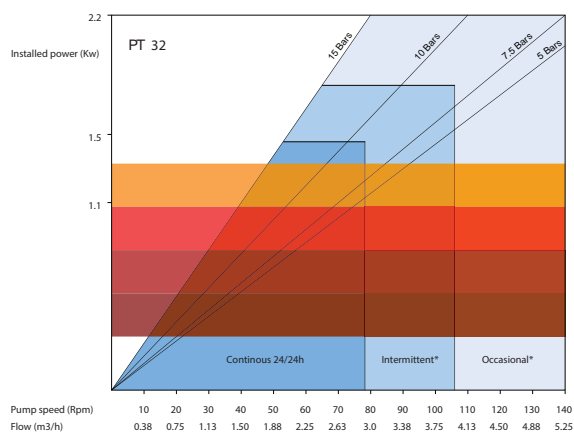


(9/ CHARACTERISTICS AND TECHNICAL SPECIFICATIONS)

9.1 - PERFORMANCES CURVES

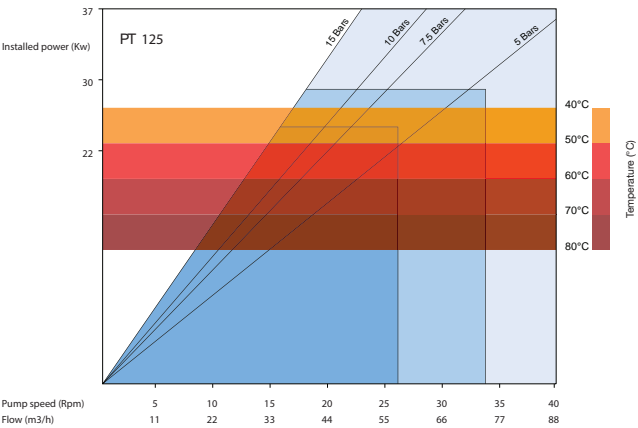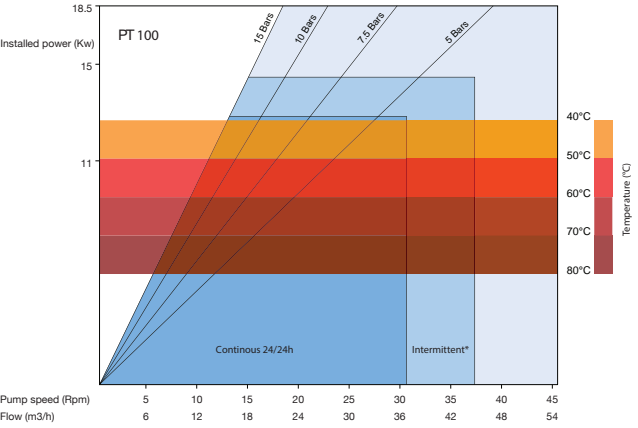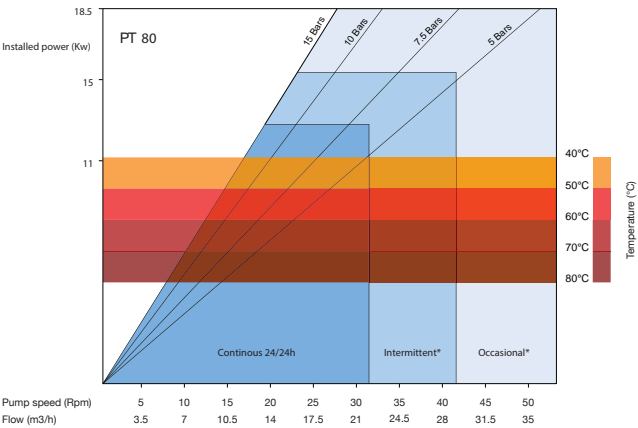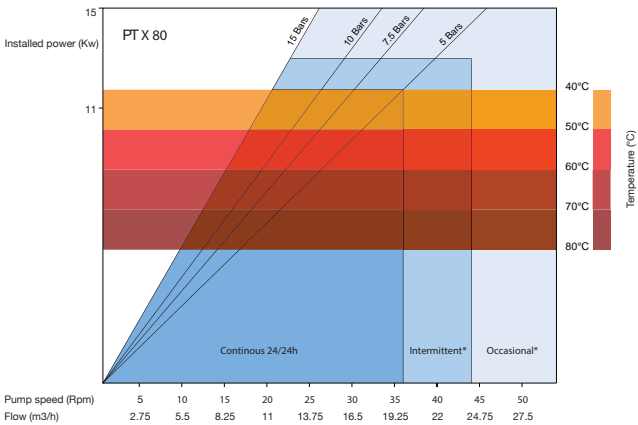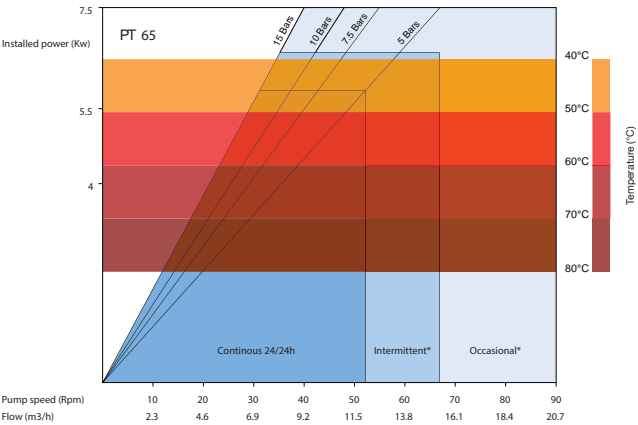


9.2 - TAPFLO PUMP DIMENSIONS PT05 TO PT125 FLANGED GEAR MOTOR AND PTS SERIES

PUMPS PT05 -10 AND PT15 -20

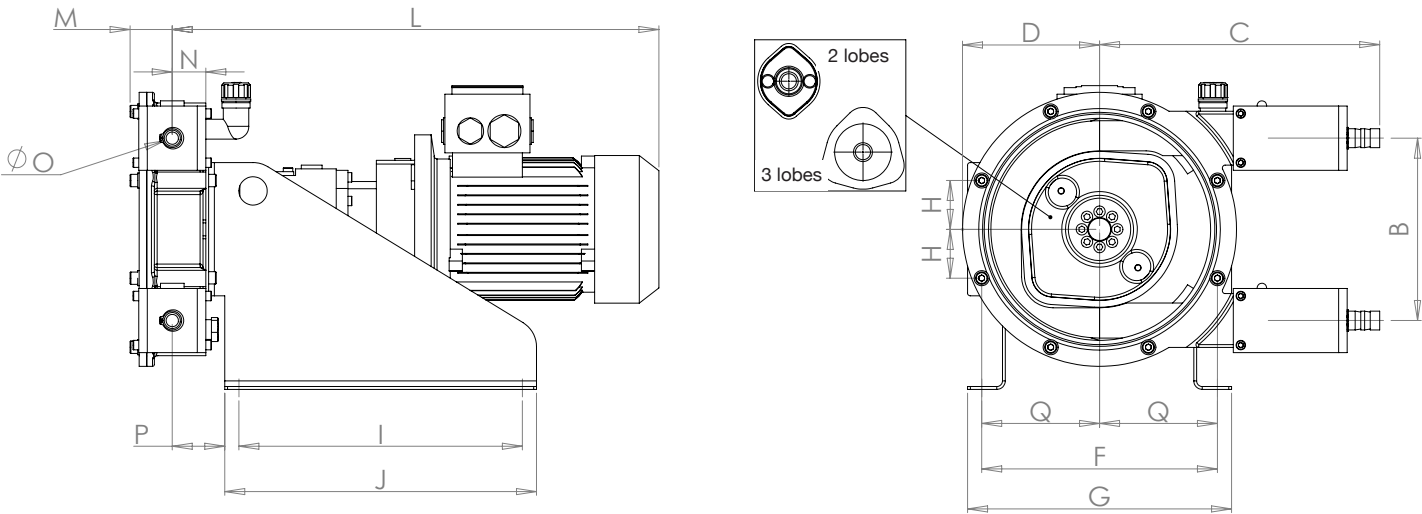

PUMPS PT15 -20

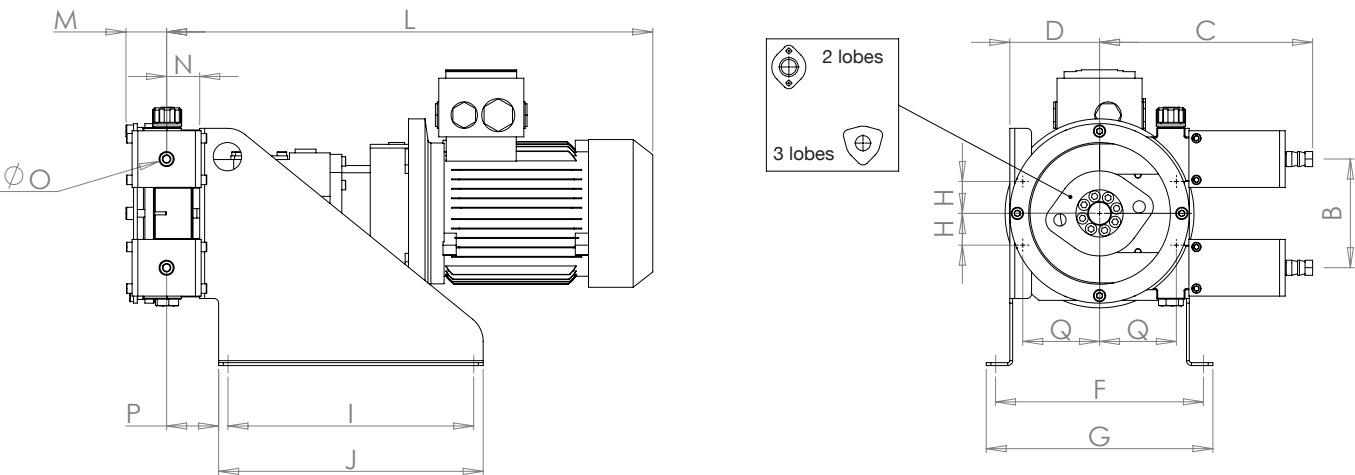


PUMPS PT05 -10

| | A | B | C | D | E | F | G | H | I | J |
|---------|-------|-----|-----|-----|-----|-----|-----|-------|-----|-----|
| PT05-10 | 103,5 | 115 | 226 | 95 | 256 | 220 | 240 | 33,5 | 260 | 280 |
| PT15 | 73 | 193 | 296 | 145 | 322 | 250 | 280 | 51,75 | 300 | 330 |
| PT20 | 73 | 193 | 296 | 145 | 322 | 250 | 280 | 51,75 | 300 | 330 |

| | K | L | M | N | O BARB CONNEXION | P | Q |
|---------|-------|---|------|------|------------------|------|--------|
| PT05-10 | 4xø9 | - | 46,5 | 34,5 | ø16 * | 56 | 81,25 |
| PT15 | 4xø13 | - | 49 | 35,5 | ø20 * | 68,8 | 124,75 |
| PT20 | 4xø13 | - | 49 | 35,5 | ø25 * | 68,8 | 124,75 |


PUMPS PT25 TO PT125

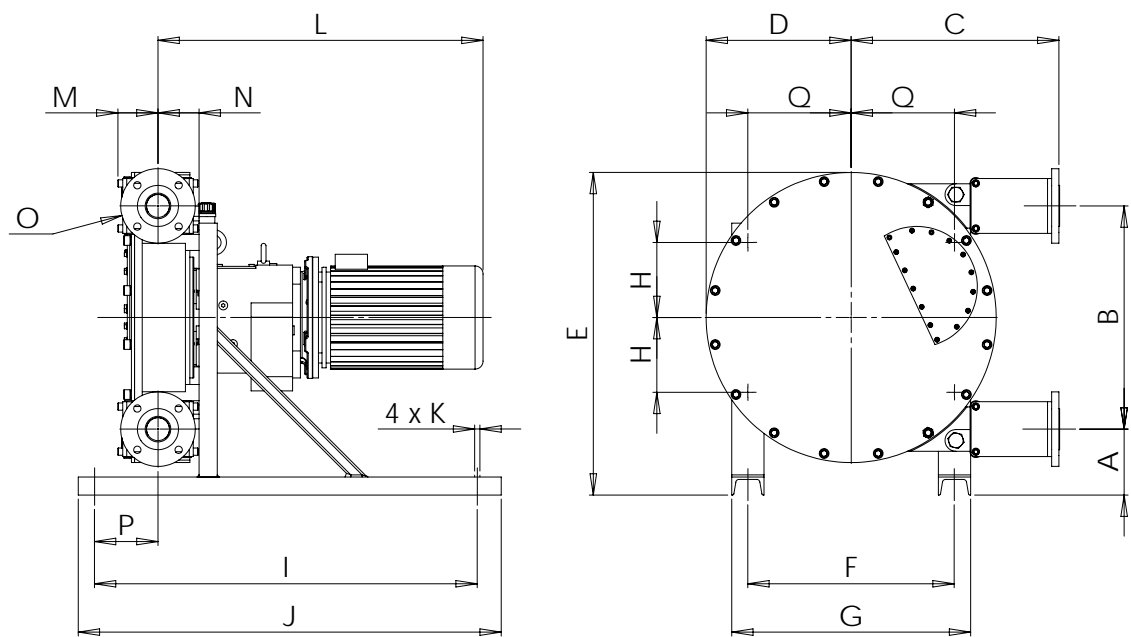



| | A | B | C | D | E | F | G | H | I | J |
|-------|-------|------|-------|-----|-------|------|------|--------|------|------|
| PT25 | 95 | 262 | 355,5 | 190 | 416 | 311 | 351 | 110 | 560 | 600 |
| PT32 | 122,5 | 330 | 435,5 | 238 | 525,5 | 426 | 476 | 157,75 | 770 | 810 |
| PT40 | 122,5 | 330 | 435,5 | 238 | 525,5 | 426 | 476 | 157,75 | 770 | 810 |
| PTX40 | 110 | 430 | 400 | 291 | 616 | 340 | 420 | 170 | 850 | 950 |
| PT50 | 164,5 | 554 | 517,5 | 360 | 801,5 | 513 | 593 | 186,5 | 950 | 1050 |
| PT65 | 164,5 | 554 | 517,5 | 360 | 801,5 | 513 | 593 | 186,5 | 950 | 1050 |
| PTX80 | 154 | 746 | 604 | 473 | 1004 | 580 | 680 | 290 | 1150 | 1250 |
| PT80 | 262 | 876 | 803 | 555 | 1320 | 690 | 830 | 345 | 1300 | 1400 |
| PT100 | 300 | 1040 | 887 | 685 | 1680 | 820 | 960 | 410 | 1900 | 2000 |
| PT125 | 263,5 | 1273 | 1034 | 785 | 1750 | 1000 | 1140 | 500 | 1900 | 2000 |

| | K | L | M | N | O ISO FLANGE | P | Q |
|-------|-------|---|-----|-----|--------------|-----|--------|
| PT25 | 4xø13 | - | 65 | 69 | DN25 PN16 | 61 | 110 |
| PT32 | 4xø13 | - | 83 | 89 | DN32 PN16 | 109 | 157,75 |
| PT40 | 4xø13 | - | 83 | 89 | DN40 PN16 | 109 | 157,75 |
| PTX40 | 4xø19 | - | 75 | 86 | DN40 PN16 | 87 | 170 |
| PT50 | 4xø19 | - | 100 | 102 | DN50 PN16 | 152 | 256,5 |
| PT65 | 4xø19 | - | 100 | 102 | DN65 PN16 | 152 | 256,5 |
| PTX80 | 4xø19 | - | 129 | 123 | DN80 PN16 | 117 | 290 |
| PT80 | 4xø27 | - | 140 | 142 | DN80 PN16 | 210 | 345 |
| PT100 | 4xø27 | - | 170 | 174 | DN100 PN16 | 295 | 410 |
| PT125 | 4xø27 | - | 300 | 232 | DN125 PN16 | 660 | 500 |


PUMPS PTS05 TO PTS20

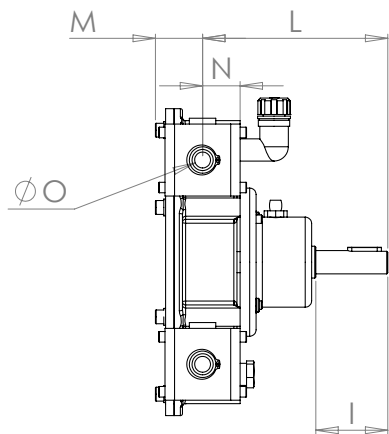

PUMPS PTS15-20

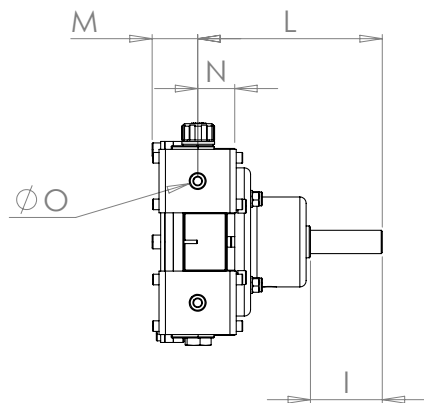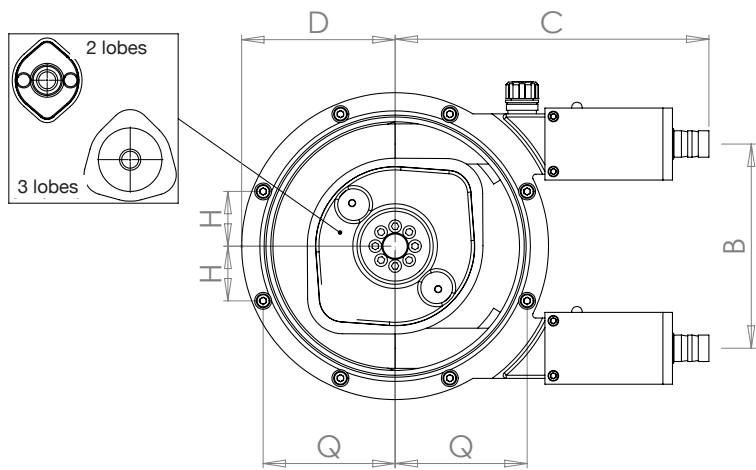


PUMPS PTS05-10

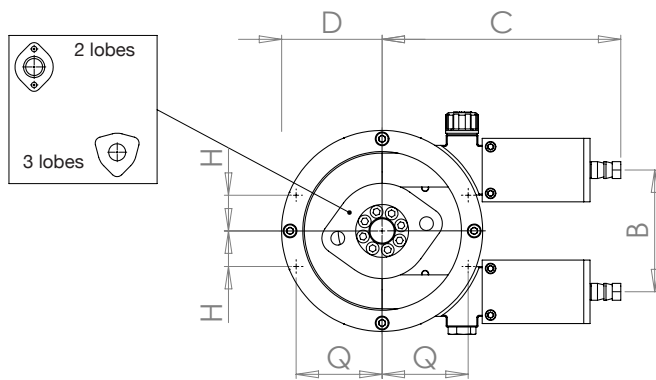

| | | | | | | | | Connections | | SHAFT | | |
|----------------|-----|-----|-----|-------|-----|------|------|----------------|--------|-------|----------|------------------|
| | B | C | D | H | L | M | N | O BARB | Q | I | DIAMETER | FRAME FASTENINGS |
| PTS05 PTS10 | 115 | 196 | 95 | 33.5 | 145 | 46,5 | 34,5 | ø16mm | 81.25 | 39 | 18k6 | 4xM8 |
| PTS15 PTS20 | 193 | 259 | 145 | 51,75 | 175 | 49 | 35,5 | ø20mm ø25mm | 124.75 | 45 | 22k6 | 4xM8 |

PUMPS PTS25 TO PT125

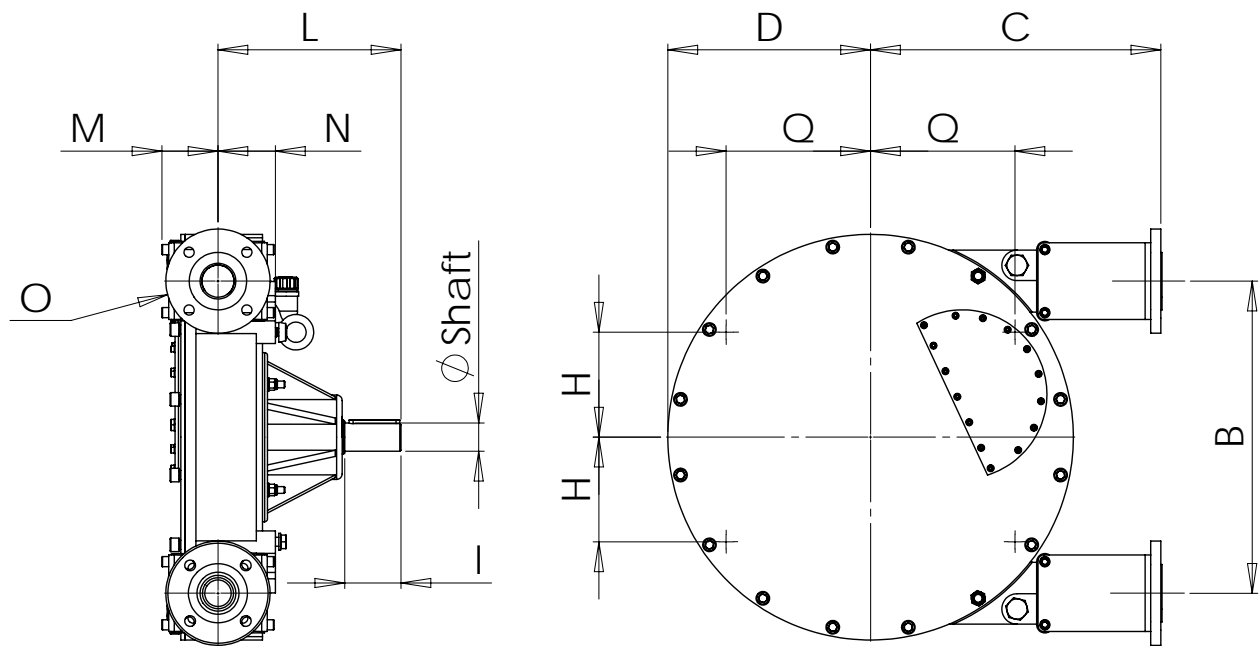


| | | | | | | | | Connections | | | | |
|----------------|------|-------|-----|--------|-------|-----|-----|------------------------|-----|-----|----------------|------------------|
| | B | C | D | H | L | M | N | O ISO FLANGES | Q | I | SHAFT DIAMETER | FRAME FASTENINGS |
| PTS25 | 262 | 309.5 | 190 | 110 | 192 | 65 | 69 | DN25 PN16 | 110 | 60 | 30k6 | 4xM10 |
| PTS32 PTS40 | 330 | 381 | 238 | 157.75 | 263 | 83 | 89 | DN32 PN16 DN40 PN16 | 133 | 80 | 40k6 | 4xM12 |
| PTSX40 | 430 | 415.5 | 291 | 170 | 260 | 75 | 86 | DN40 PN16 | 170 | 80 | 40k6 | 4xM12 |
| PTS50 PTS65 | 554 | 455 | 360 | 186.5 | 325 | 100 | 102 | DN50 PN16 DN65 PN16 | 220 | 100 | 50k6 | 4xM16 |
| PTSX80 | 746 | 582 | 473 | 290 | 400 | 129 | 123 | DN80 PN16 | 290 | 130 | 70k6 | 4xM20 |
| PTS80 | 876 | 730.5 | 555 | 345 | 440 | 140 | 142 | DN80 PN16 | 345 | 150 | 80k6 | 4xM20 |
| PTS100 | 1040 | 817 | 685 | 410 | 572 | 170 | 174 | DN100 PN16 | 410 | 200 | 100k6 | 4xM20 |
| PTS125 | 1273 | 1034 | 785 | 500 | 673.5 | 300 | 232 | DN125 PN16 | 500 | 180 | 125k6 | 4xM24 |


9.3 - NOMENCLATURE

Exploded view PT05 - PT10

REFERR TO PT PUMP PARTS LIST FOR PART DESIGNATION.

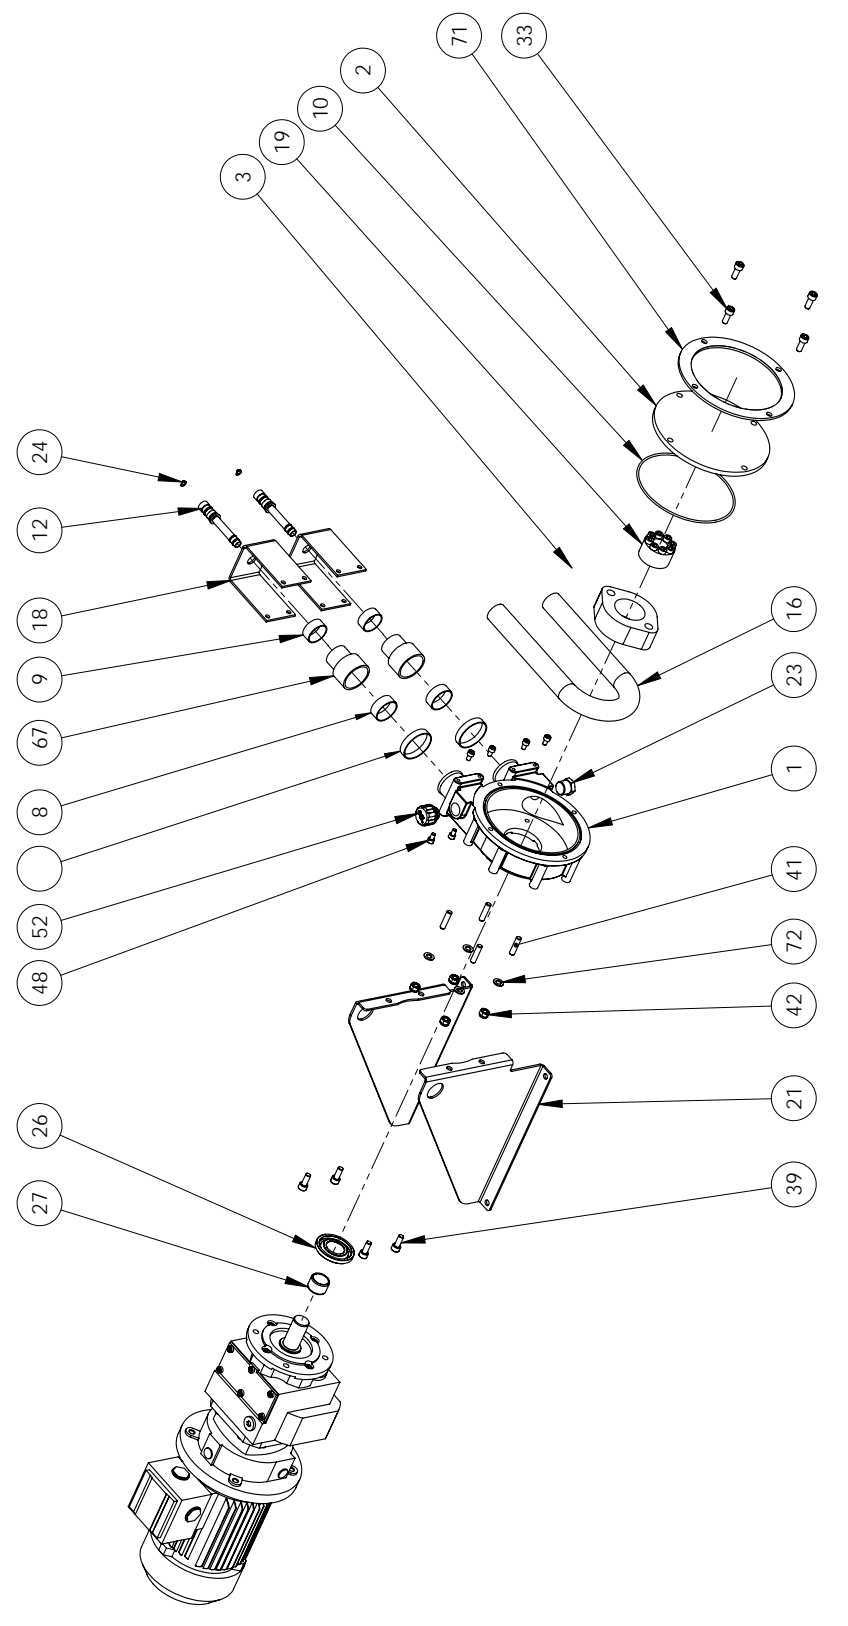

Wheel #3
3 lobe version

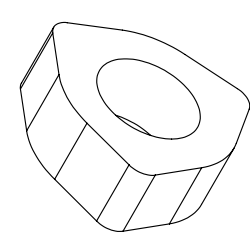

| | | | | |
|--|--|-------------|-----------------------|--------------------------------|
| MATERIAL: | WEIGHT: | CUSTOMER: | PUMP TYPE: PT05-10 | Code Oratio: Serial number: |
| BRUT: | General clearance: +/- | PROJECT N°: | PART NUMBER REP | |
| TITLE: <div>PT05-10 EXPLODED VIEW</div> | | | | |
| SCALE: 1: | DWG N°: EXPLODE PT05-10 IND01 10-2011 | SIZE: A3 | REV: 1 | |

(9.3 - NOMENCLATURE)

Exploded view PT15 - PT20

REFER TO PT PUMP PARTS LIST FOR PART DESIGNATION.

Wheel #3
3 lobe version

| | | | | |
|--------------|--|-------------|-----------------------|--------------------------------|
| MATERIAL: | WEIGHT: | CUSTOMER: | PUMP TYPE: PT15-20 | Code Oratio: Serial number: |
| BRUT: | General clearance: +/- | PROJECT N°: | PART NUMBER REP | |
| TITLE: | | | | |
| SCALE: 1: | DWG N°: EXPLODE PT15-20 IND01 10-2011 | | | SIZE: A3 REV: 1 |

(9.3 - NOMENCLATURE)

Exploded view PT25 - PT40


REFERR TO PT PUMP PARTS LIST FOR PART DESIGNATION

DETAIL A


DETAIL B

| | | | | |
|-----------------------------|----------------------------------|-------------|-------------|----------------|
| MATERIAL: | WEIGHT: | CUSTOMER: | PUMP TYPE: | Code Oratio: |
| NS | | | PT25-32-40 | Serial number: |
| BRUT: | General clearance: +/- | PROJECT N°: | PART NUMBER | |
| DIM: | | | REP | |
| TITLE: | | | | |
| EXPLODED VIEW PT25-32-40 | | | | |
| SCALE: | DWG N°: | SIZE: | | REV: |
| 1: | EXPLODE PT25-32-40 IND01 11-2010 | A3 | | 1 |

Exploded view PTX40 - PT65

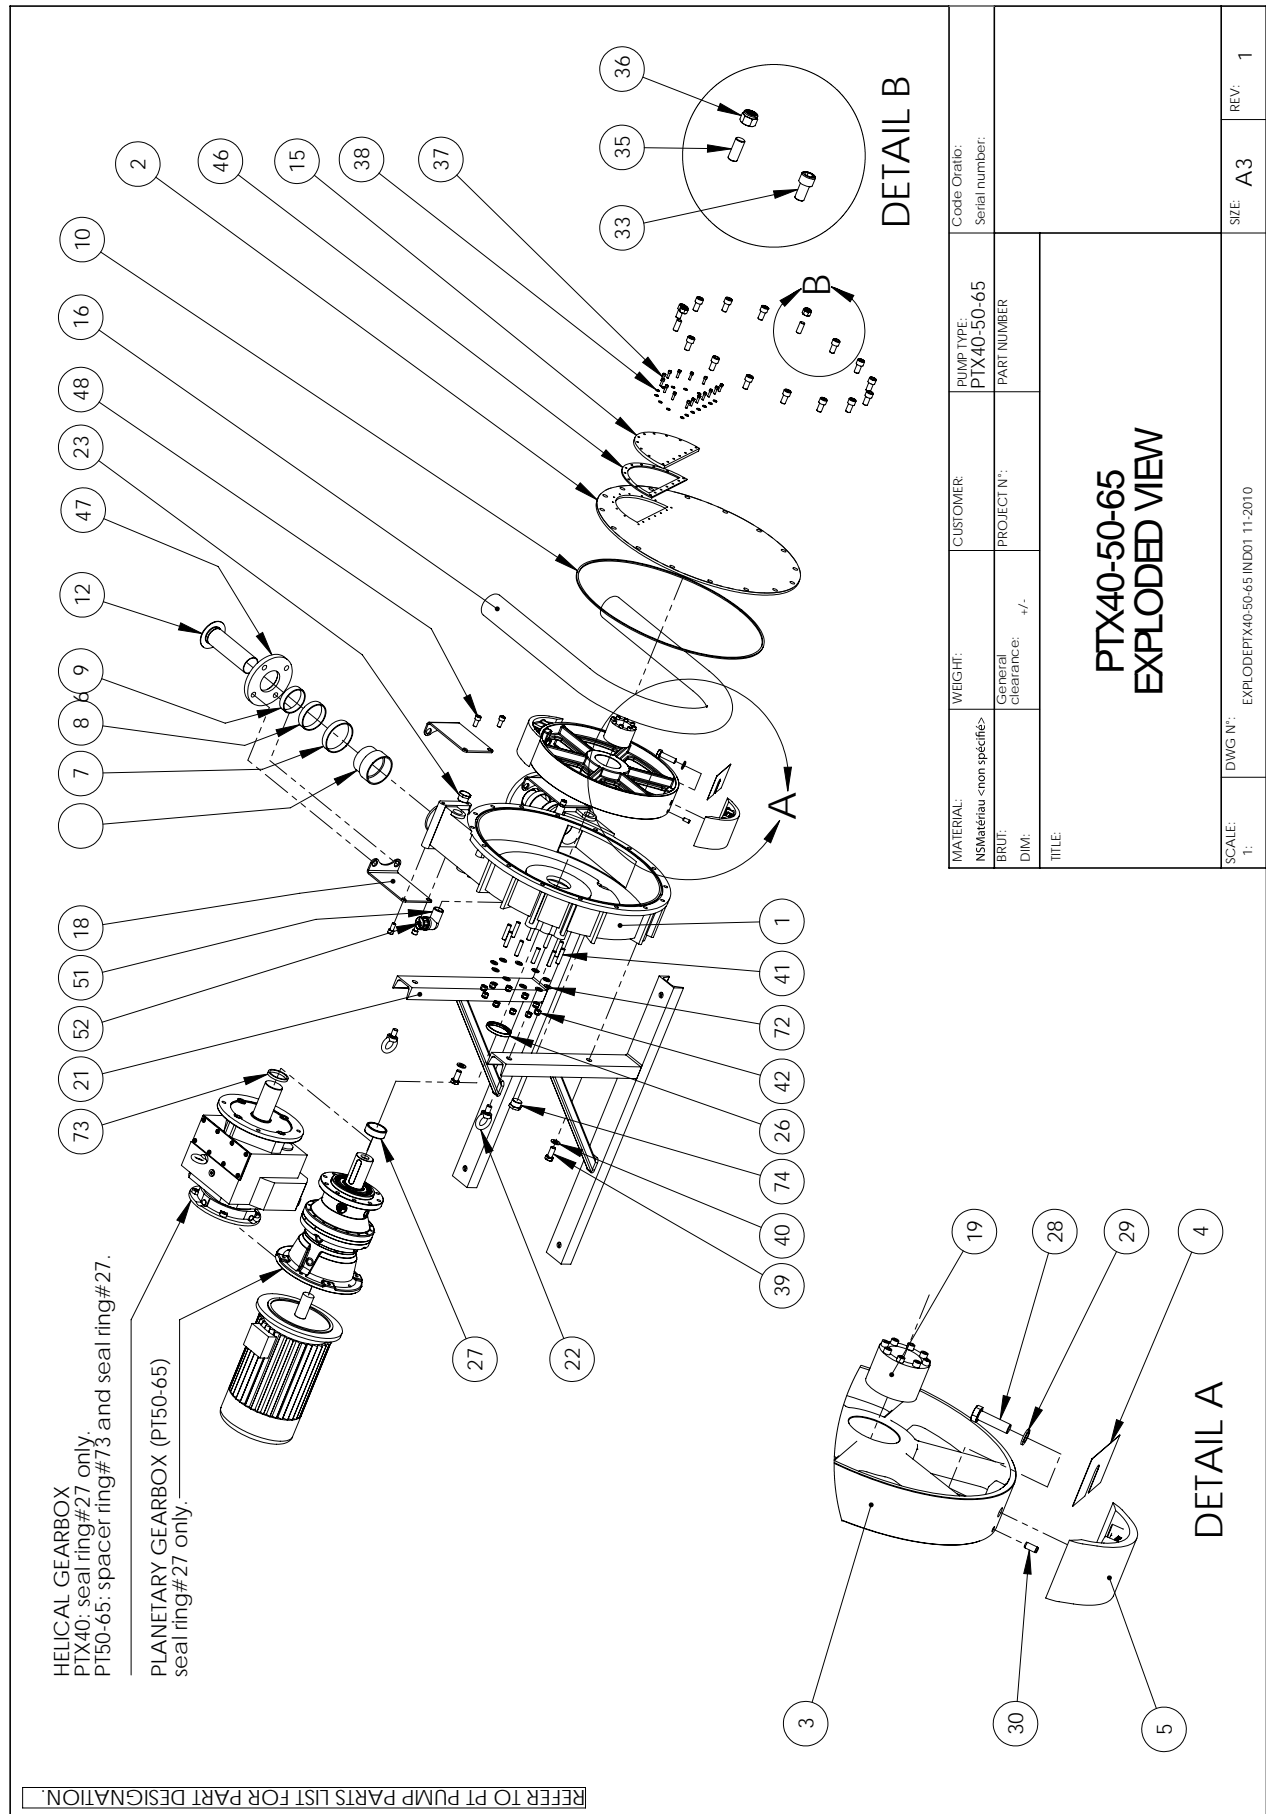

Exploded view PTX80 - PT80

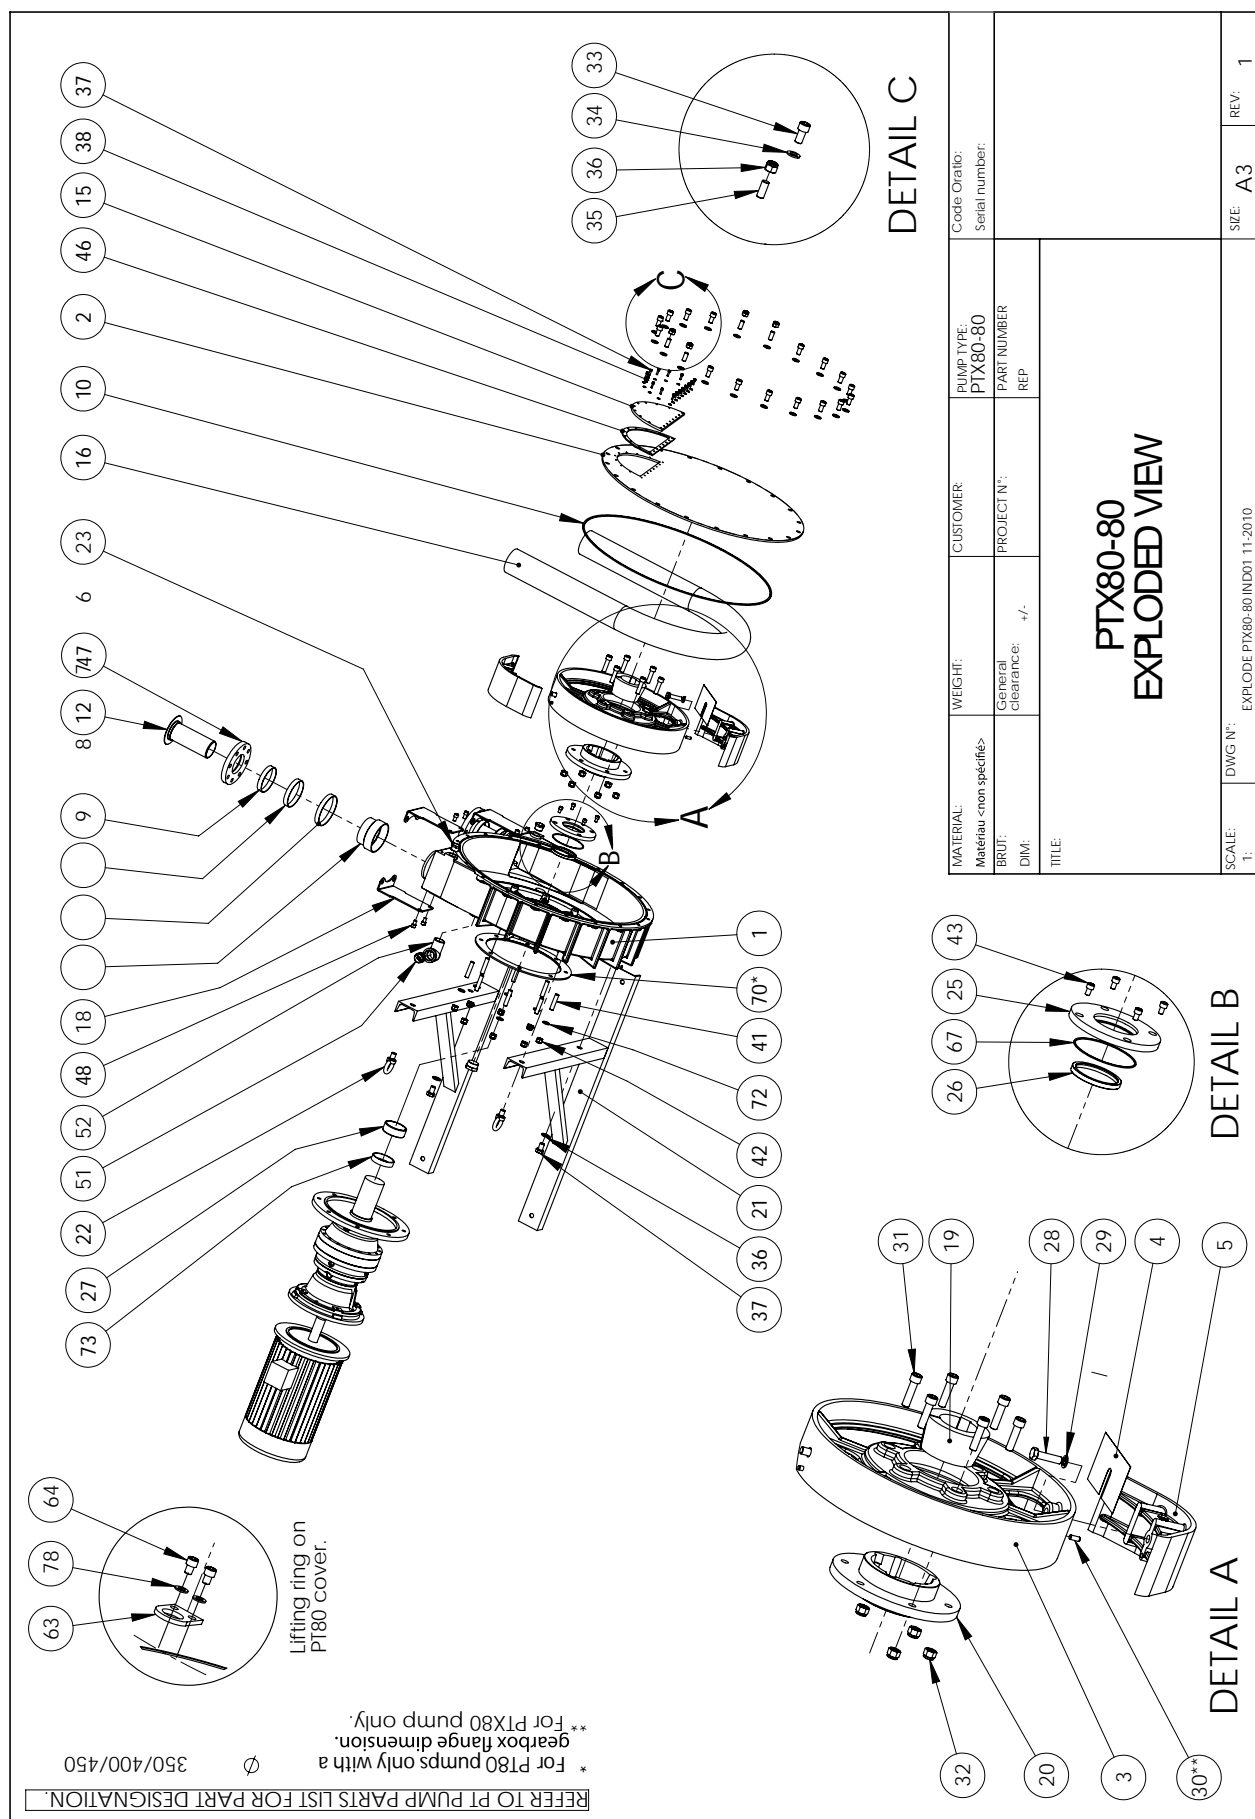

(9.3 - NOMENCLATURE)

Exploded view PT100

REFERR TO PT PUMP PARTS LIST FOR PART DESIGNATION.

67

26

25

43

63

78

64

DETAIL A

DETAIL B

MATERIAL:
Matériau <non spécifiés>

BRUT:

DIM:

TITLE:

WEIGHT:

General
clearance: +/-

CUSTOMER:

PROJECT N°:

PUMP TYPE:
PT100

PART NUMBER

Code Oratio:
Serial number:

SCALE:
1:

DWG N°:
EXPLODE PT100 IND01 11-2010

SIZE:
A3

REV:
1

(9.3 - NOMENCLATURE)

Exploded view PT125

REFER TO PT PUMP PARTS LIST FOR PART DESIGNATION.

DETAIL A


DETAIL B

DETAIL C

| | | | | |
|--|-------------------------------------|-------------|---------------------|--------------------------------|
| MATERIAL: Matériau <non spécifiés> | WEIGHT: | CUSTOMER: | PUMP TYPE: PT125 | Code Oratio: Serial number: |
| BRUT: | General clearance: +/- | PROJECT N°: | PART NUMBER REP | |
| TITLE: <div>PT125 EXPLODED VIEW</div> | | | | |
| SCALE: 1: | DWG N°: EXPLODE PT125 IND01 11-2010 | | | SIZE: A3 REV: 1 |


(9.3 - NOMENCLATURE)

Exploded view PTS05 - PTS125 bearing case

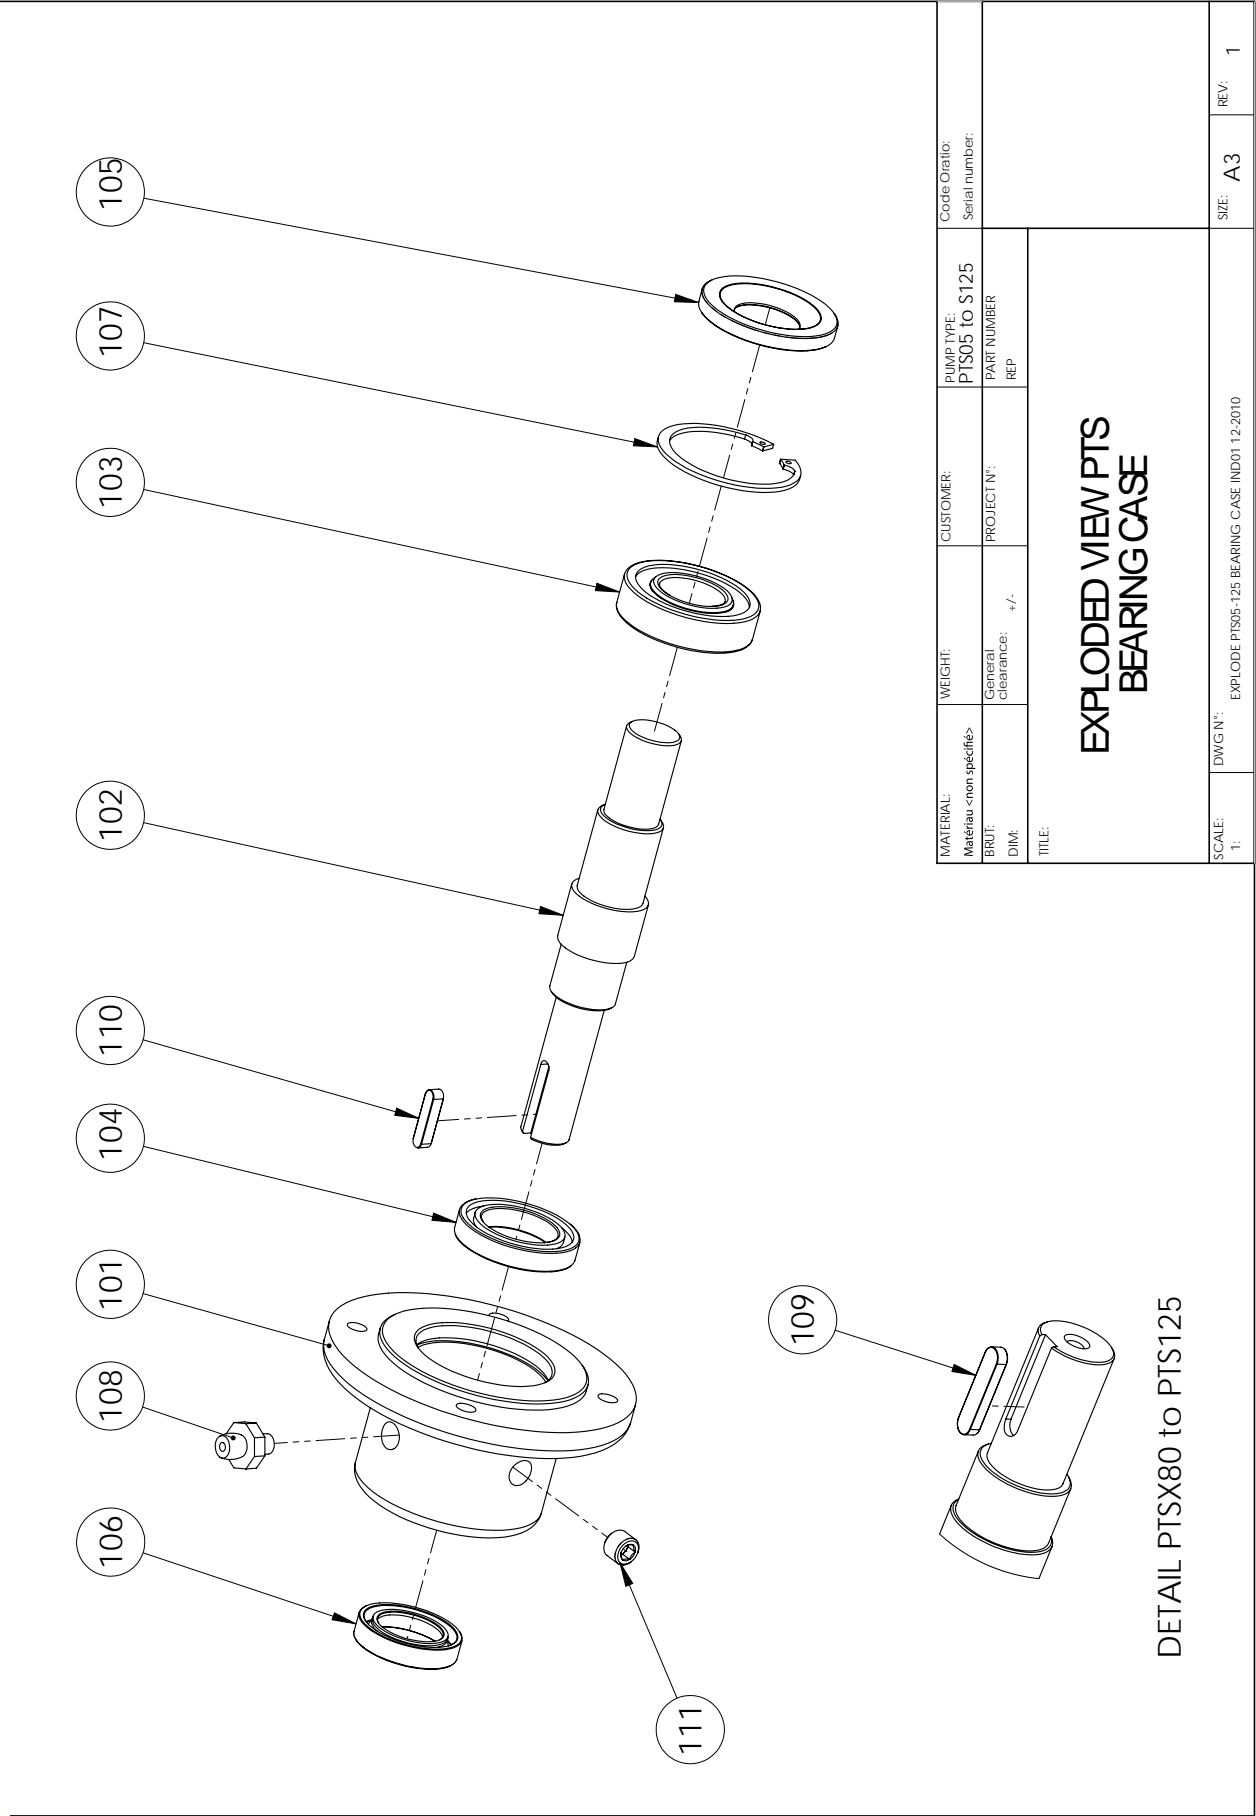

(9.3 - NOMENCLATURE)

Exploded view PT hose rupture and vacuum options

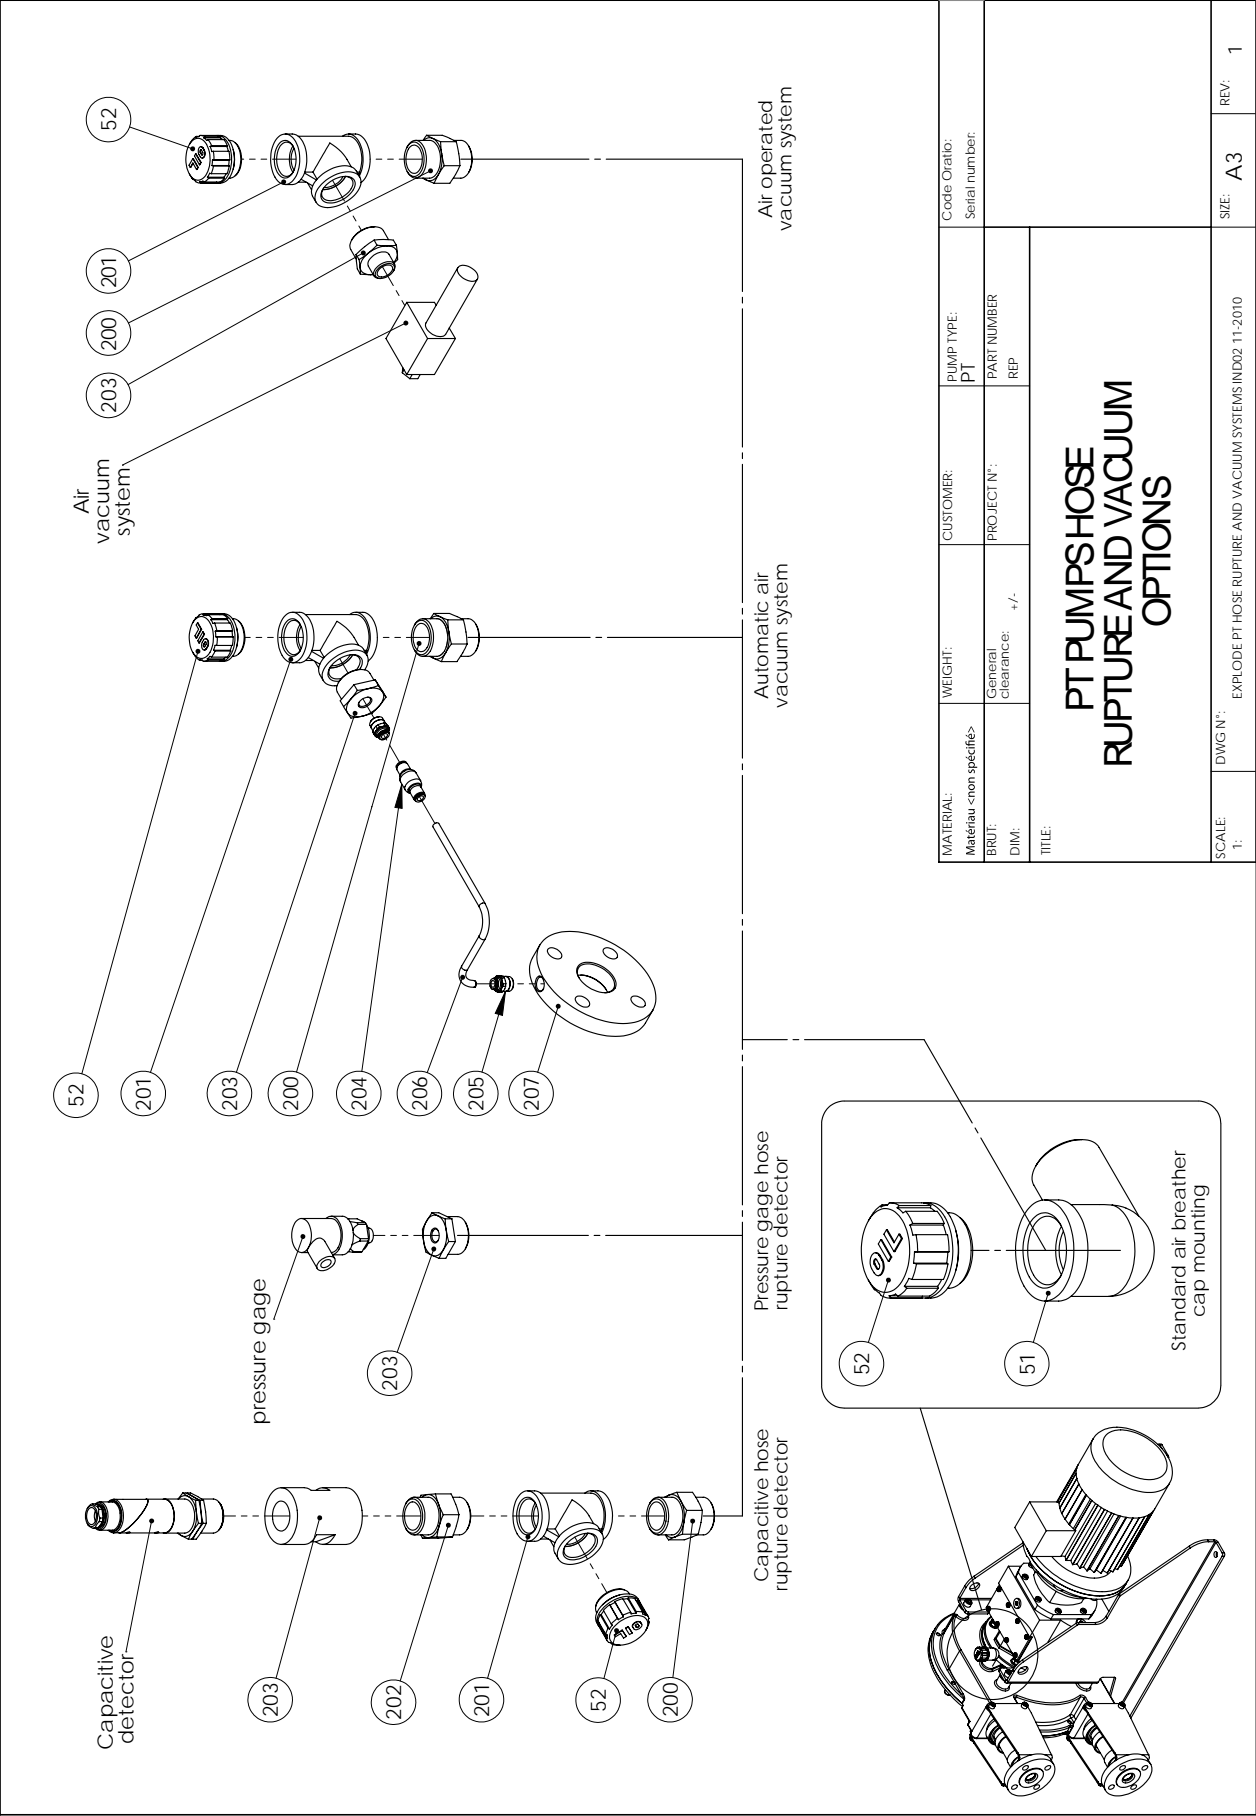

9.4 - PT PUMP PARTS LIST (see speci.c exploded view)

| REF. | DESIGNATION | PT 05 PT10 | PT15 PT20 | PT25 TO PT40 | PTX40 TO PT 65 | PTX80 | PT80 | PT100 | PT125 |
|------|-------------------------|---------------|--------------|-----------------|-------------------|-------|------|-------|-------|
| 1 | CASING | X | X | X | X | X | X | X | X |
| 2 | COVER | X | X | X | X | X | X | X | X |
| 3 | WHEEL | X | X | X | X | X | X | X | X |
| 4 | SHIM | | | X | X | X | X | X | X |
| 5 | SHOE | | | X | X | X | X | X | X |
| 6 | SLEEVE | X | X | X | X | X | X | X | X |
| 7 | CLAMP SLEEVE | X | X | X | X | X | X | X | X |
| 8 | CLAMP ON SLEEVE / HOSE | | X | X | X | X | X | X | X |
| 9 | CLAMP ON HOSE | X | X | X | X | X | X | X | X |
| 10 | COVER SEAL | X | X | X | X | X | X | X | X |
| 12 | INSERT | X | X | X | X | X | X | X | X |
| 14 | LUBRICANT | X | X | X | X | X | X | X | X |
| 15 | SIGHT GLASS | | | X | X | X | X | X | X |
| 16 | HOSE | X | X | X | X | X | X | X | X |
| 18 | BRACKET | X | X | X | X | X | X | X | X |
| 19 | HUB | X | X | X | X | X | X | | |
| 20 | BOLT ON PLATE | | | | | X | X | | |
| 21 | FRAME | X | X | X | X | X | X | X | X |
| 22 | LIFT RING | | | | | X | X | X | X |
| 23 | OIL PLUG | X | X | X | X | X | X | X | X |
| 24 | CIRCLIPS | X | X | | | | | | |
| 25 | SEAL FLANGE | | | | | X | X | X | X |
| 26 | SHAFT SEAL | X | X | X | X | X | X | X | X |
| 27 | SEAL RING | X | X | X | X | X | X | X | X |
| 28 | SHOE BOLT | | | X | X | X | X | X | X |
| 29 | SHOE BOLT WASHER | | | X | X | X | X | X | X |
| 30 | SHOE CENTERING PIN | | | X | X | X | | | |
| 31 | BOLT ON PLATE SCREW | | | | | X | X | | |
| 32 | NUT FOR REF 31 | | | | | X | X | | |
| 33 | COVER BOLT | X | X | X | X | X | X | X | X |
| 34 | COVER BOLT WASHER | | | | X | X | X | X | X |
| 35 | COVER STUD | | | | X | X | X | X | X |
| 36 | NUT FOR REF 35 | | | | X | X | X | X | X |
| 37 | SIGHT GLASS BOLT | | | X | X | X | X | X | X |
| 38 | WASHER FOR REF 37 | | | X | X | X | X | X | X |
| 39 | FRAME BOLT | X | X | X | X | X | X | X | X |
| 40 | WASHER FOR REF 39 | X | X | X | X | X | X | X | X |
| 41 | GEARBOX STUD | X | X | X | X | X | X | X | X |
| 42 | NUT FOR REF 41 | X | | X | X | X | X | X | |
| 43 | SEAL FLANGE BOLT | | | | | X | X | X | X |
| 46 | SIGHT GLASS SEAL | | | X | X | X | X | X | X |
| 47 | INLET & OULET FLANGE | | | X | X | X | X | X | X |
| 48 | BRACKET BOLT | X | X | X | X | X | X | X | X |
| 49 | BRACKET BOLT WASHER | | | | | | | | |
| 51 | 90° BEND | | X | X | X | X | X | X | X |
| 52 | BREATHER PLUG | X | X | X | X | X | X | X | X |
| 59 | WHEEL BOLT | | | | | | | X | X |
| 60 | WHEEL BOLT WASHER | | | | | | | X | X |
| 63 | LIFT RING ON COVER | | | | | | X | X | X |
| 64 | BOLT FOR REF 63 | | | | | | X | X | X |
| 67 | O RING FOR SEAL FLANGE | | | | | X | X | X | X |
| 70 | GEARBOX CENTRING FLANGE | | | | | | X | | |
| 71 | COVER FLANGE | X | | | | | | | |
| 72 | WASHER for REF 41 | X | X | X | X | X | X | X | X |
| 73 | SPACER RING | | | | X (PT50-65 D350) | X | X | X | X |
| 74 | PLUG | | X | X | X | X | X | X | X |
| 75 | O RING FOR 73 | | | | | | | X | |

9.5 - PT BEARING CASE PARTS LIST (see speci.c exploded view page 39)

| REF. | DESIGNATION | PT 05 PT10 | PT15 PT20 | PT25 TO PT40 | PTX40 TO PT 65 | PTX80 | PT80 | PT100 | PT125 |
|------------|----------------------|---------------|--------------|-----------------|----------------------|-------|------|-------|-------|
| 101 | BEARING CASE (PTS) | X | X | X | X | X | X | X | X |
| 102 103 | SHAFT (PTS) | X | X | X | X | X | X | X | X |
| 103 | ROLLAR BEARING (PTS) | X | X | X | X | X | X | X | X |
| 104 | BALL BEARING (PTS) | X | X | X | X | X | X | X | X |
| 105 | LIP SEAL (PTS) | X | X | X | X | X | X | X | X |
| 106 | LIP SEAL (PTS) | X | X | X | X | X | X | X | X |
| 107 | CIRCLIPS (PTS) | X | X | X | X | X | X | X | X |
| 108 | Grease (PTS) | X | X | X | X | X | X | X | X |
| 109 | SHAFT KEY (PTS) | X | X | X | X | X | X | X | X |
| 110 | SHAFT KEY (PTS) | | | | | X | X | X | X |
| 111 | PLUG (PTS) | X | X | X | X | X | X | X | X |

9.6 - HOSE RUPTURE AND VACUUM SYSTEM PARTS LIST (see specific exploded view page 42)

| REF. | DESIGNATION | CAPACITIVE HOSE RUPTURE DETECTOR | PRESSURE GAGEIC HOSE RUPTURE DETECTOR | AUTOMATIC AIR VACUUM SYSTEM | AIR OPERARED VACUUM SYSTEM |
|------|-----------------------|-------------------------------------|---|--------------------------------|-------------------------------|
| 51 | 90° BEND | X | X | X | X |
| 52 | VENT | X | | X | X |
| 200 | HEXAGON NIPPLE | X | | X | X |
| 201 | TE CONNEXION | X | | X | |
| 202 | HEXAGON NIPPLE | X | | X | |
| 203 | ADAPTOR | X | X | X | X |
| 204 | AIR SUPPLY CHECKVALVE | | | X | |
| 205 | AIR SUPPLY CONNEXION | | | X | |
| 206 | AIR SUPPLY HOSE | | | X | |
| 207 | VACUUM FLANGE | | | X | |

9.7 - LUBRIFICATION TABLE

The table indicates the quantity of lubricant necessary for every pump size. Employ only the Tapflo lubricant for Tapflo hose pumps. refer to §6.2 for lubricant emptying and filling.

| PUMPS | PT 05-10 | PT15-20 | PT 25 | PT 32 | PT 40 | PTX 40 |
|--------------------------------|----------|---------|-------|-------|-------|--------|
| QUANTITY OF LUBRICANT (LITERS) | 0,4 | 0,8 | 1,4 | 2,3 | 2,3 | 6 |

| PUMPS | PT 50 | PT 65 | PTX 80 | PT 80 | PT 100 | PT 125 |
|--------------------------------|-------|-------|--------|-------|--------|--------|
| QUANTITY OF LUBRICANT (LITERS) | 9 | 9 | 20 | 40 | 60 | 100 |

9.8 - SHOE SHIMMING TABLE

Refer to §6.5 to remove or add shims. The table below points out the necessary number of shims under every shoe according to the speed, pressure and the temperature of the product. Respect these indications scrupulously to optimize the hose life and to avoid a possible deterioration of the internal parts. For temperatures over 60°C, withdraw one shim in comparison with the table below. For viscosities over 3000cP or concentrations exceeding 300g / l, withdraw one shim in comparison with the table below. For a suction lift higher than 4 metres, add one shim to the following figures.



CAUTION : Every shoe must include the same number of shims (0.5mm).

| PUMP TYPE PT 25 | | | PUMP TYPE PT 32 | | |
|--|-------------|-----------------|--|-------------|-----------------|
| Pressure bar (psi) | Speed - Rpm | Number of shims | Pressure bar (psi) | Speed - Rpm | Number of shims |
| $\Delta P \leq 5$ (72,5) | 0 to 40 | 0 | $\Delta P \leq 5$ (72,5) | 0 to 45 | 0 |
| | 40 to 160 | 0 | | 40 to 140 | 0 |
| 5 (72,5) $\leq \Delta P \leq 7,5$ (108,75) | 0 to 40 | 2 | 5 (72,5) $\leq \Delta P \leq 7,5$ (108,75) | 0 to 40 | 2 |
| | 40 to 125 | 1 | | 45 to 140 | 1 |
| $7,5$ (108,75) $\leq \Delta P \leq 10$ (145) | 0 to 40 | 3 | $7,5$ (108,75) $\leq \Delta P \leq 10$ (145) | 0 to 40 | 3 |
| | 40 to 105 | 2 | | 45 to 110 | 2 |
| 10 (145) $\leq \Delta P \leq 15$ (217,5) | 0 to 40 | 4 | 10 (145) $\leq \Delta P \leq 15$ (217,5) | 0 to 40 | 4 |
| | 40 to 90 | 3 | | 45 to 80 | 3 |

| PUMP TYPE PT 40 | | | PUMP TYPE PTX 40 | | |
|--|-------------|-----------------|--|-------------|-----------------|
| Pressure bar (psi) | Speed - Rpm | Number of shims | Pressure bar (psi) | Speed - Rpm | Number of shims |
| $\Delta P \leq 5$ (72,5) | 0 to 40 | 0 | $\Delta P \leq 5$ (72,5) | 0 to 55 | 0 |
| | 40 to 160 | 0 | | 40 to 120 | 0 |
| 5 (72,5) $\leq \Delta P \leq 7,5$ (108,75) | 0 to 40 | 2 | 5 (72,5) $\leq \Delta P \leq 7,5$ (108,75) | 0 to 55 | 2 |
| | 40 to 125 | 1 | | 40 to 95 | 1 |
| $7,5$ (108,75) $\leq \Delta P \leq 10$ (145) | 0 to 40 | 3 | $7,5$ (108,75) $\leq \Delta P \leq 10$ (145) | 0 to 55 | 3 |
| | 40 to 105 | 2 | | 40 to 75 | 2 |
| 10 (145) $\leq \Delta P \leq 15$ (217,5) | 0 to 40 | 4 | 10 (145) $\leq \Delta P \leq 15$ (217,5) | 0 to 55 | 4 |
| | 40 to 90 | 3 | | 40 to 60 | 3 |

| PUMP TYPE PT 50 | | |
|--|-------------|-----------------|
| Pressure bar (psi) | Speed - Rpm | Number of shims |
| $\Delta P \leq 5$ (72,5) | 0 to 30 | 0 |
| | 30 to 100 | 0 |
| 5 (72,5) $\leq \Delta P \leq 7,5$ (108,75) | 0 to 30 | 2 |
| | 30 to 65 | 1 |
| $7,5$ (108,75) $\leq \Delta P \leq 10$ (145) | 0 to 30 | 3 |
| | 30 to 50 | 2 |
| 10 (145) $\leq \Delta P \leq 15$ (217,5) | 0 to 30 | 4 |
| | 30 to 42 | 3 |

| PUMP TYPE PT 65 | | |
|--|-------------|-----------------|
| Pressure bar (psi) | Speed - Rpm | Number of shims |
| $\Delta P \leq 5$ (72,5) | 0 to 30 | 0 |
| | 30 to 90 | 0 |
| 5 (72,5) $\leq \Delta P \leq 7,5$ (108,75) | 0 to 30 | 2 |
| | 30 to 55 | 1 |
| $7,5$ (108,75) $\leq \Delta P \leq 10$ (145) | 0 to 30 | 3 |
| | 30 to 47,5 | 2 |
| 10 (145) $\leq \Delta P \leq 15$ (217,5) | 0 to 30 | 4 |
| | 30 to 40 | 3 |

| PUMP TYPE PTX 80 | | |
|--|-------------|-----------------|
| Pressure bar (psi) | Speed - Rpm | Number of shims |
| $\Delta P \leq 5$ (72,5) | 0 to 25 | 0 |
| | 25 to 65 | 0 |
| 5 (72,5) $\leq \Delta P \leq 7,5$ (108,75) | 0 to 25 | 2 |
| | 25 to 46 | 1 |
| $7,5$ (108,75) $\leq \Delta P \leq 10$ (145) | 0 to 25 | 3 |
| | 25 to 40 | 2 |
| 10 (145) $\leq \Delta P \leq 15$ (217,5) | 0 to 25 | 4 |
| | 25 to 31 | 3 |

| PUMP TYPE PT 80 | | |
|--|-------------|-----------------|
| Pressure bar (psi) | Speed - Rpm | Number of shims |
| $\Delta P \leq 5$ (72,5) | 0 to 20 | 0 |
| | 20 to 60 | 0 |
| 5 (72,5) $\leq \Delta P \leq 7,5$ (108,75) | 0 to 20 | 2 |
| | 20 to 47 | 1 |
| $7,5$ (108,75) $\leq \Delta P \leq 10$ (145) | 0 to 20 | 3 |
| | 20 to 37 | 2 |
| 10 (145) $\leq \Delta P \leq 15$ (217,5) | 0 to 20 | 4 |
| | 20 to 31 | 3 |

| PUMP TYPE PT 100 | | |
|--|-------------|-----------------|
| Pressure bar (psi) | Speed - Rpm | Number of shims |
| $\Delta P \leq 5$ (72,5) | 0 to 15 | 0 |
| | 15 to 50 | 0 |
| 5 (72,5) $\leq \Delta P \leq 7,5$ (108,75) | 0 to 15 | 2 |
| | 15 to 32,5 | 1 |
| $7,5$ (108,75) $\leq \Delta P \leq 10$ (145) | 0 to 15 | 3 |
| | 15 to 25 | 2 |
| 10 (145) $\leq \Delta P \leq 15$ (217,5) | 0 to 15 | 4 |
| | 15 to 20 | 3 |

| PUMP TYPE PT 125 | | |
|--|-------------|-----------------|
| Pressure bar (psi) | Speed - Rpm | Number of shims |
| $\Delta P \leq 5$ (72,5) | 0 to 10 | 0 |
| | 10 to 35 | 0 |
| 5 (72,5) $\leq \Delta P \leq 7,5$ (108,75) | 0 to 10 | 2 |
| | 10 to 27,5 | 1 |
| $7,5$ (108,75) $\leq \Delta P \leq 10$ (145) | 0 to 10 | 3 |
| | 10 to 25 | 2 |
| 10 (145) $\leq \Delta P \leq 15$ (217,5) | 0 to 10 | 4 |
| | 10 to 20 | 3 |

9.9 - GENERATED NOISE AND TEMPERATURE

NOISE :

The Tapflo hose pumps do not generate more than 60dB during their operation.

TEMPERATURE :

The cover and the pump casing can become very hot due to the friction on the hose and liquid temperature. If you need to limit the pump temperature, please contact your Tapflo distributor.


9.10 - EXPANSIBLE HUB ASSEMBLY AND DISASSEMBLY : GENERALITIES

ASSEMBLY :


Slightly grease contact surfaces, threads, shaft and wheel bore and introduce the hub inside the wheel. Pre-tighten the screws and place this unit on the gearbox shaft and position according to the table section 6.4.2. Cross tighten the screws two or three times and tighten to the according torque section 9.11 TORQUES AND FIGURES.

DISASSEMBLY :

Untighten the screws on the hub and place them in the unlock holes. Tighten the screws until the two elements of the hub disassemble and withdraw the wheel hub.

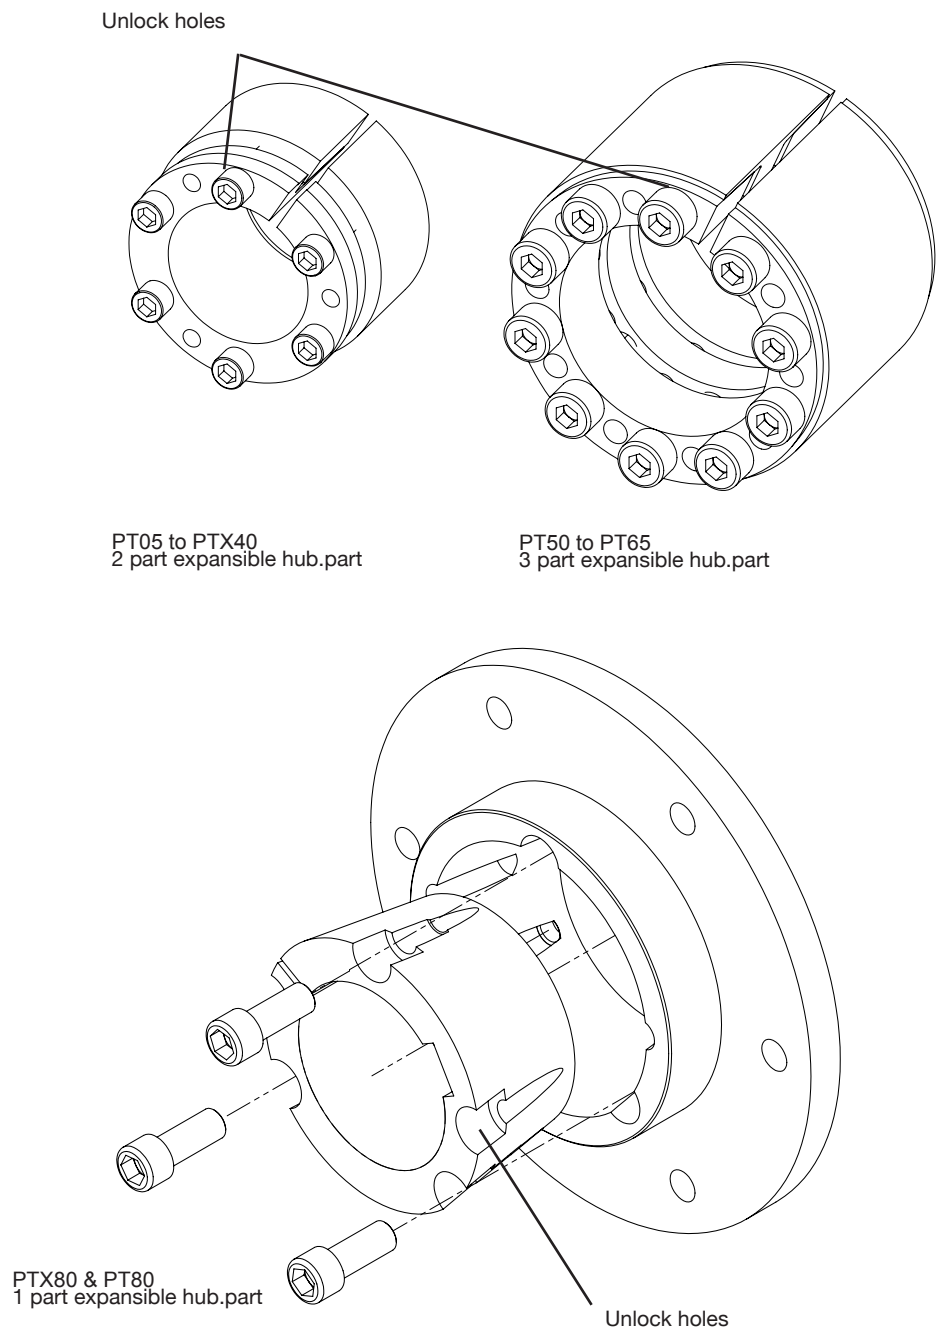

9.11 - TORQUES FIGURES

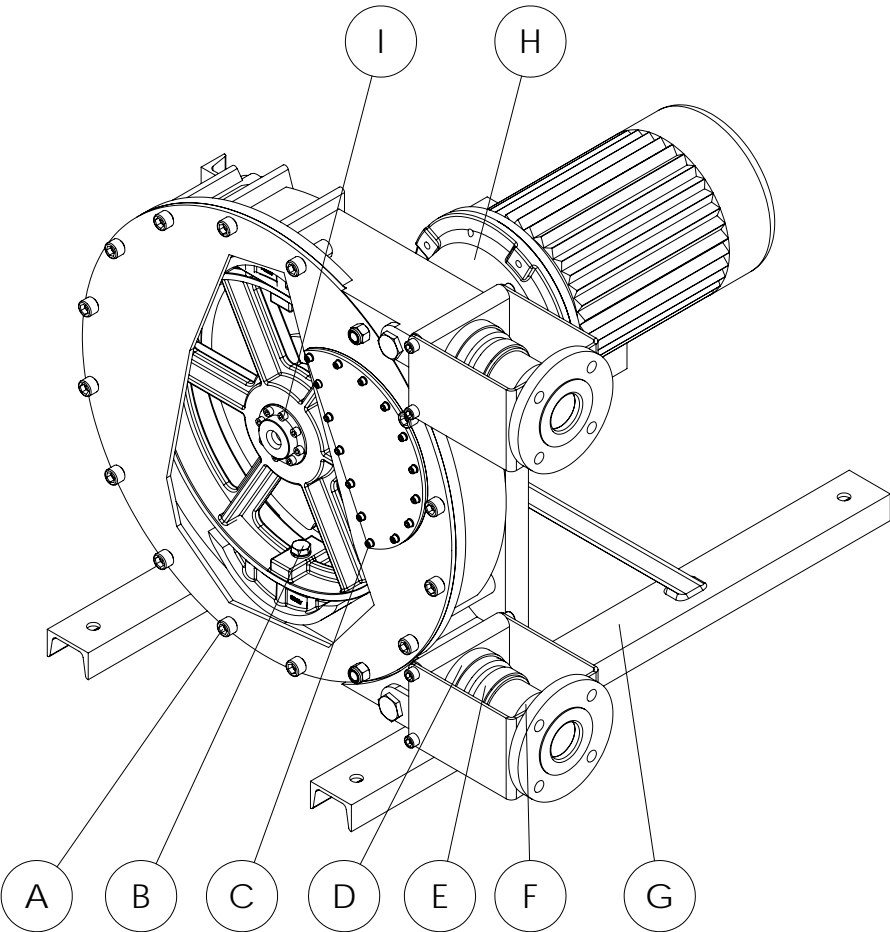

| POS. | DESIGNATION | MAX TORQUES IN Nm | | | | | | | | |
|------|-------------|-------------------|------|--------------|-------|--------------|-------|------|-------|-------|
| | | PT 05 PT20 | PT25 | PT32 PT40 | PTX40 | PT50 PT65 | PTX80 | PT80 | PT100 | PT125 |
| A | COVER | 3.3 | 7.8 | 27 | 27 | 65 | 65 | 65 | 127 | 127 |
| B | SHOE | | 46 | 79 | 79 | 402 | 402 | 402 | 691 | 691 |
| C | WINDOW | | 3.3 | 3.3 | 3.3 | 3.3 | 3.3 | 3.3 | 3.3 | 3.3 |
| D | CLAMP REF7 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 |
| E | CLAMP REF8 | 12 | 16 | 30 | 30 | 30 | 30 | 45 | 45 | 45 |
| F | CLAMP REF9 | 12 | 50 | 50 | 50 | 50 | 50 | 50 | 50 | 50 |
| G | FRAME | 8 | 15 | 27 | 27 | 65 | 127 | 127 | 220 | 220 |
| H | GEARBOX | 34 | 67 | 116 | 116 | 116 | 291 | 291 | 291 | 291 |
| I | HUB | 12 | 13 | 13 | 27 | 35 | 110 | 110 | | |

9.12 - WEIGHTS SERIE PT & PTS

| ALL DIMENSIONS IN KILOGRAMS | | | | | | | | | | | | | | | | | |
|-----------------------------|----------|----------|----------|--------|------|-----------|------|-----------|------|-----------|------|-----------|-----------|-----------|---------|-----------|-------|
| PART | PT05-10 | PT15 | PT20 | PT25 | | PT32 | | PT40 | | PTX40 | | PT50 | PT65 | PTX80 | PT80 | PT100 | PT125 |
| CASING | 5 | 8 | 8 | 16 | | 29 | | 29 | | 43 | | 88 | 88 | 140 | 240 | 375 | 450 |
| WHEEL | 1,2 | 3 | 3 | 4,3 | | 7,7 | | 7,7 | | 12,9 | | 27,5 | 27,5 | 37,3 | 62,3 | 89 | 173 |
| COVER | 0,3 | 0,6 | 0,6 | 5 | | 10,3 | | 10,3 | | 15,4 | | 23,5 | 23,5 | 41 | 60 | 89 | 203 |
| FRAME | 1,3 (X2) | 1,7 (X2) | 1,7 (X2) | 6 (X2) | | 12,5 (X2) | | 12,5 (X2) | | 13,4 (X2) | | 15,9 (X2) | 15,9 (X2) | 25,5 (X2) | 48 (X2) | 62,5 (X2) | 274 |
| SHOE | | | | ALU | IRON | ALU | IRON | ALU | IRON | ALU | IRON | IRON | IRON | IRON | IRON | IRON | IRON |
| | | | | 0,34 | 0,9 | 0,55 | 1,44 | 0,68 | 1,79 | 0,9 | 2,37 | 3,2 | 3,2 | 3,2 | 3,2 | 3,2 | 3,2 |
| HOSE | 0,4 | 0,8 | 1,4 | 2 | | 3 | | 3 | | 4 | | 6 | 6 | 15 | 20 | 30 | 45 |

10/ COMPLEMENTARY INSTRUCTIONS FOR ATEX CERTIFIED MATERIAL

Peristaltic hose pump

Complementary instructions for ATEX certified material.

Models : Tapflo PT and PTS

Pumping and operation in zone 0 is completely banned.

The pumps are planned for a use in the following gas and dust explosive atmospheres.

II 2G : zone 1 and 2

II 3G : zone 1 and 2

II 2D : zone 1 and 2

II 3D : zone 1 and 2

The following instructions must be read jointly with :

- > All ATEX regulations for the country for which the pump is destined.
- > Decrees, laws, directives, application circulars, the standards, the code of practice, and any other document concerning its place of installation.

No responsibility whatsoever is taken for the non-observance of these instructions.

The ATEX form provided by the customer which stipulates all the data concerning his process and application of the pump is the only evidence in case of dispute. The non-observance of this data will disengage the responsibility of Tapflo.

This information is complementary to our general maintenance manual.

The installation of the material must be carried out by qualified and skilled personnel.

Our equipment is marked EEC with the ATEX 94/9/CE title.

Ensure compatibility between the indications being reproduced on the gauge, the present explosive atmosphere, the zone of use, ambient and surface temperatures.

Until the 30.06.2003, the equipment on the market could be equipped with accessories or (and) components certified according to the rules of CENELEC relating to the electric materials usable in explosive atmospheres of group II. From this date, the accessories or (and) component assembled equipping the motors with our pumps must have an EEC examination certificate.

Summary

- 1 - Level of pumps certification**
- 2 - Protection of the pumping part**
- 3 - Protection of the transmission part**
- 4 - Particular dispositions when using a frequency inverter**
- 5 - Dry running the pumps**
- 6 - Replacement of parts**
- 7 - Solvents incompatible with pumps seals**
- 8 - Possible leakage of pumped liquid**
- 9 - Checking lubricant level in the pump**
- 10 - Drive of the pump**
 - 10.1 Alignment of the pump and the drive (only for the PTS pumps)**
 - 10.2 Flexible couplings**
 - 10.3 Electric installation of the motor or the motor reducer of the pump**
 - 10.4 ATEX characteristics of the motor or the motor reducer of the pump**
- 11 - ATEX characteristics of the pumping installation**
- 12 - Pumping vat of retention**
- 13 - Marking of the pump**

1 - Pumps certification level

All Tapflo peristaltic pumps are certified with II 2G T4, II 3G T4 or II 2D T4 certification.

All Tapflo peristaltic pumps are certified with II 2G T4, II 3G T4 or II 2D T4 certification. The pumps are machines whose surface temperatures are very dependent on the temperature of the product that they pump.

Moreover, the peristaltic pumps have “mechanical” heating due to the deformations of the hose, depending on the discharge pressure and speed of rotation of the pump. So, the level of protection II 2G T4, II 3G T4, II 3D T4 and II 3D T4 is obtained with the working limits determined at the reception of the ATEX form (see adjoined form).

Pumps PTO5, PTS05, PT10, PTS10, PT20 and PTS20 are limited to a maximum discharge pressure of 7.5 bars.

Pumps PT 25 to 125 and PTS25 to PTS125 are limited to a maximum discharge pressure of 15 bars.

Going beyond of the working limitations specified at the sale is regarded as an abnormal function of the pump. This can generate surface temperatures higher than the safe maximum surface temperatures recommended in the classification of temperature T for which the pump was certified. It is the responsibility of the operator to respect these working limits.

In order to use the pump industrially with the required safety levels, safety devices have been provided (see the chapters “Protection of the pumping part” and “Protection of the transmission part”).

2 - Protection of the pumping part

The heating of the pumping part is directly related to the functioning temperature of the hose. The lifespan of the hose, which is the heart of any peristaltic pump, is strongly dependent on the working temperature of the hose : it imposes the working limits of the Tapflo peristaltic pumps. Consequentially, the working temperature of the hose (and thus the heating of the pump) must be known and controlled, and it depends on the three following parameters :

- > Temperature of pumped product
- > Number of rotations of the pump
- > Discharge pressure

For pumps II 2G T4

Use of a PT100 temperature sensor only in a gas atmosphere.

The permanent control of the maximum surface temperature of the pump housing makes it possible to control the heating of the pump effectively.

In the event of dysfunction of the pump (excessive rotation, too high temperature of pumped product, unsuitable shimming of the shoes...), the temperature sensor will detect any passing over the critical temperature of the body and will stop the pump before the surface temperatures of the pump exceed the limit corresponding to the classification of temperature T of the pump.

The threshold of release of the temperature sensor will have to be adjusted from 0°C to 75°C more or less 5°C, with a 10°C hysteresis.

For the certified pumps II 3G T4, II 2D and II 3D :

For dust zones, D becomes IP6X

According to the specific requirements for ATEX materials group II category 3, the use of such materials in an exposable atmosphere is adapted only under normal working conditions of the known material.

Thus, the end-user must make sure that the pump is used under normal working conditions, and that the particular working limits indicated in this manual are respected.

3 - Protection of the transmission part

The reducer and the motor which motorize the pump must be used within the limits of working defined by the manufacturers of these materials. Going beyond these limits is likely to generate a risk of ignition of the atmosphere surrounding the material.

The Tapflo pump installations are in particular designed so that the normal working conditions of the pump do not generate an overload of the motor or the reducer.

So that the function limits of these components are not exceeded, even in case of dysfunction of the pump, the motor will have to be protected from the overcurrents, in accordance with the code of practice.

4 - Particular dispositions when using a frequency inverter

The Tapflo peristaltic pumps have variable limits of working according to the discharge pressure, number of rotations of the pump and temperature of the pumped product. These working limits are mainly imposed by the heating of the hose, on which the lifespan is strongly dependent.

Within the framework of an application required to change the speed of the pump, the three following points will have to be checked.

- > Temperature of pumped product
- > Number of rotations of the pump
- > Discharge pressure

The maximum values of use will be fixed at the determination of the pump whose copy is in the appendix.

5 - Dry running the pumps

The Tapflo peristaltic pumps can function in the absence of liquid in the pump, without causing heating of the pump higher than the classified of temperature T, in particular for the period of starting-up of the pump.

In fact, dry running the pump with blocked inlets or outlets generates too high a demand on the pump hose, and can generate high internal temperatures because of the compression and decompression of the air locked up between the pump and the blocked opening.

This type of dysfunction is not controllable by a safety device (of sensor type) because the pump is dry and the mechanical constraints generated on the pump are low. Starting up the pump must thus be done after having checked that the inlet and outlet are not blocked.

Nevertheless, dry running is not a normal function of the pump and if it doesn't directly constitute a risk of ignition, it leads to premature wear and tear of the hose. This type of function must be limited as much as possible.

6 - Replacement of parts

The parts should be replaced only by original Tapflo parts which correspond to the configuration of origin of the pump. If necessary, the characteristics of the pump are modified and the ATEX certification of the pump is not applicable any more.

With each hose replacement, the adjustment of compression of the hose must be controlled and adapted to the instructions of adjustment registered in the handbook.

The technicians who intervene on ATEX material must be ATEX trained and approved.

7 - Solvents incompatible with the pump's seals

The user must make sure that the seals and the hose with which the pump is equipped are compatible with the pumped product and the products used in the cleaning of the pump.

8 - Possible leakages of pumped liquid

The possible leakages of liquid by the pump's seals do not generate a risk of ignition as long as the explosive atmosphere surrounding the material corresponds to the type of atmosphere for which it was planned.

You have to check that in contact with the atmosphere surrounding the pump or of a material located near the pump, the pumped liquids are not likely to create an explosive atmosphere for which the material was not envisaged.

The rupture of the hose, which is a wearing part, can involve important leakage of pumped liquid. A hose detector makes it possible to detect these leakages and will stop the pump if necessary.

9 - Checking of the lubricant level in the pump

An insufficient lubricant level in the pump can generate surface temperatures higher than the recommended limit of temperature T of the pump. Stop the pump and check the lubricant level every 1000 working hours.

10 - Drive the pump

The maximum speed of rotation of the pumps must be respected (see certification of the pumps). At the start or after any modification of the pumping installation, the speed of rotation of the pump must be controlled and must be lower than the maximum speed indicated in the instructions.

10 - 1 - Alignment of the pump and the drive (only for the PTS pumps)

To carry out the alignment and the coupling, use a perfectly straight ruler to control offsetting and thickness gauges for angular misalignment.

It is important to control alignment with each stage of the installation as indicated below in order to make sure that none of these stages generate constraints on the group or the pump :

- after fixing the pump on the foundations
- after fixing the piping
- after the pump has functioned at a normal temperature of use

IMPORTANT : one should not rely on the flexible coupling to compensate for a misalignment.

10 - 2 - Flexible coupling

Certified ATEX flexible coupling must be used. These couplings must have a level of protection equivalent or higher than that of the pumping installation.

For the instructions of maintenance of certified ATEX flexible coupling of the Tapflo pumping installations, please refer to the technical note of the coupling.

10 - 3 - Electric installation of the motor or the motor reducer of the pump

Check the agreement between the indications of the motor gauge and the supply voltage.

For the connection of the motor to the electrical supply network, follow the indications of the manual supplied with the motor. Follow the assembly diagram of wiring, make sure the wires are adapted to the power consumption and make sure the contacts are tight.

The motors must be protected by suitable circuit breakers and fuses.

Make sure the earth connections are properly made.

Dry run the pump to make sure that the connections are correct and that the direction of rotation corresponds well with the suction and the discharge of the installation.

10 - 4 - Ground connection of pump

A bonding strip lug can be seen on the frames of Tapflo type pumps and on the pump housing and bearing case of the PTS type pumps.

10 - 5 - ATEX characteristics of the motor or the motor reducer of the pump

The motor or motor reducer must have ATEX characteristics adapted to recognized use (group gas IIB, class of temperature T4) and must explosion-proof.

11 - ATEX characteristics of the pumping installation

A pumping installation can be composed of materials (motor, reducer, sensors...) from which ATEX characteristics are different from those of the pump.

In this case, the group will have ATEX characteristics corresponding to characteristics ATEX of the component with the lowest level of protection.

12 - Pumping vat of retention

At a constant arrival of liquid in a vat of retention in an ATEX zone, the uninterrupted start-up can generate a classification in zone 0.

The case can only arise when the pump is used in the starting position. It is then imperative that the suction pipe always has liquid present so as not to create explosive conditions in the presence of fuel and combustible agents. Thus, the adjustment of the low point of the tank will have to be higher than the opening of the suction pipe.

That will always result in the presence of liquid and not of gas and liquid.

13 - Marking of the pump

The marking of the Tapflo pumps is of type :

Tapflo :

TYPE PT

or PTS

II 2 G T4 or

II 3 G T4

N° series :

Year :

The marking of the Tapflo groups is of type :

Tapflo :

Group PT

or PTS

II 2 G T4 or

II 3 G T4

N° series :

Year :

In the case of a pumping group, ATEX certified materials will retain their original markings.



In compliance with Health & Safety Regulations you, the user are required to declare the substances that have been in contact with the product(s) you are returning to Tapflo or any of its subsidiaries or distributors. Failure to do so will cause delays in servicing the item or in issuing a response. Therefore, please complete this form to ensure that we have the information before receipt of the item(s) being returned.

A FURTHER COPY MUST BE ATTACHED TO THE OUTSIDE OF THE PACKAGING CONTAINING THE ITEM(S).

You, the user, are responsible for cleaning and decontaminating the item(s) before returning them. Please complete a separate decontamination certificate for each item returned.

• 1.0 /

Company name
Address
City
Postal code
Country
Telephone
Fax number

• 2.0 / PUMP

2.1 / Serial number

2.2 / Has the pump been used ? YES NO

If yes, please complete all the following paragraphs. If no, please complete paragraph 5 only

• 3.0 / Details of substances pumped

3.1 / Chemical Names

| | | |
|----|----|----|
| a) | b) | c) |
|----|----|----|

3.2 / Precautions to be taken in handling these substances

| | | |
|----|----|----|
| a) | b) | c) |
|----|----|----|

3.3 / Action to be taken in the event of human contact

| | | |
|----|----|----|
| a) | b) | c) |
|----|----|----|

3.4 / Cleaning fluid to be used if residue of chemical is found during servicing

• 4.0 / I hereby confirm that the only substances(s) that the equipment specified has pumped or come into contact with are those named, that the information given is correct, and the carrier has been informed if the consignment is of a hazardous nature.

• 5.0 /

| | |
|----------|------|
| Signed | Name |
| Position | Date |

Remarks : to assist us in our servicing please describe any fault condition you have witnessed.

12 / STATEMENT OF COMPLIANCE CE

SECTION 1.0

Description of the pump :

Produced in France for:

Tapflo AB

Filaregatan 4

S-44234 Kungälv, Sweden

TEL : +46 303 633 90

Type :

PT05 - PT10 - PT15 - PT20 - PT25 - PT32 - PT40 - PTX40 - PT50 - PT65 - PTX80 -
PT80 - PT100 - PT125

Serial N° :

Description : Volumetric pump, hose pump

SECTION 2.0

Applicable directives :

Machinery directives :

89 / 392 / EEC

89 / 655 / EEC

91 / 368 / EEC

93 / 44 / EEC

SECTION 3.0

SECTION 4.0

Statement :

We declare under our responsibility that the equipment defined in section 1.0 satisfies in all the directives of the European Community specified in section 2.0 and in the French work legislation.

Håkan Ekstrand

Date: 30 July 2007

SAFETY AND CONTROL MEASURES TO RESPECT IMPERATIVELY

1 - Mechanical risk

Ensure that all protections (cover, sight glass, ventilator hood, coupling protection) are in place before operating the pump. Disconnect the electricity supply before any mechanical intervention, except during a hose replacement. Hose replacement must be done with the pump cover closed.

While replacing a hose, wear protective gloves and clothes and keep hands away from the brackets, suction and discharge flanges.

During the pump maintenance, check that the lifting points are correctly used.

The frame of the pump must be firmly fastened to the ground.

2 - Electrical risk

Ensure that the electrical installation is conforming to the standards required in the country of use especially regarding earth and thermal protection.

3 - Operational risk

Check the compatibility of the products to be pumped with:

- The peristaltic pump principle.
- The hose material.
- The lubricant.
- The inserts material.
- The shoe material.

Tapflo cannot guaranty the hose lifetime or the product loss due to a hose burst. It is the operator's responsibility to prevent pumped liquid loss with additional hose rupture detectors and or automatic shutdown valves. Check §2.4 conditions of guarantee for further information. Ensure that the pump is compatible with the required process. Ensure that the pressure applied on the suction side is compatible with the pump. The rupture of the hose and its consequences must be taken in account :

- The pump casing can be filled with the pumped product.
- If the suction line is on load, this one can empty into the pump casing and leak out of the pump.
- If the discharge line is under pressure, the pumped product may be forced back into the pump casing and leak out of the pump.

A leakage detector as well as automatic shutdown valves are recommended in order to prevent such consequences.

While draining the pump following a hose rupture, take note of the risk of pollution caused by the lubricant and by the pumped product.

The pump, being volumetric, may suffer dangerously high pressure by even partial blockage of the discharge line.

Ensure that all protections have been made regarding this aspect.

Before each use, check the direction of rotation of the pump. While placing the pump under vacuum, mount window screws using an airtight glue to avoid air leakage.

TAPFLO AB

Sweden

Filaregatan 4 | S-442 34 Kungälv

Tel: +46 303 63390

Fax: +46 303 19916

E-mail addresses:

Commercial questions: sales@tapflo.com

Orders: order@tapflo.com

Tech support: support@tapflo.com

Tapflo products and services are available in 68 countries on 6 continents.

Tapflo is represented worldwide by own Tapflo Group Companies and carefully selected distributors assuring highest Tapflo service quality for our customers' convenience.

AUSTRALIA | AUSTRIA | AZERBAIJAN | BELARUS | BELGIUM | BOSNIA & HERZEGOVINA | BRAZIL | BULGARIA | CANADA | CHILE | CHINA | COLOMBIA | CROATIA | CZECH REPUBLIC | DENMARK | ECUADOR | ESTONIA | FINLAND | FRANCE | GREECE | GEORGIA | GERMANY | HONG-KONG | HUNGARY | ICELAND | INDIA | INDONESIA | IRELAND | ISRAEL | ITALY | JAPAN | JORDAN | KAZAKHSTAN | LATVIA | LITHUANIA | MACEDONIA | MALAYSIA | MEXICO | MONTENEGRO | MOROCCO | THE NETHERLANDS | NEW ZEALAND | NORWAY | POLAND | PORTUGAL | PHILIPPINES | ROMANIA | RUSSIA | SERBIA | SINGAPORE | SLOVAKIA | SLOVENIA | SOUTH AFRICA | SOUTH KOREA | SPAIN | SWEDEN | SWITZERLAND | TAIWAN | THAILAND | TURKEY | UKRAINE | UNITED ARAB EMIRATES | UNITED KINGDOM | USA | UZBEKISTAN | VIETNAM

Tapflo Group Companies

Austria

Tapflo Austria

Tel: +43 732 27292910

sales@tapflo.at

Azerbaijan

Tapflo Azerbaijan LLC

Tel: +994 502660799

sales@tapflo.az

Baltic States

Tapflo Latvia

Tel: +371 67472205

sales@tapflo.lv

Belarus

Tapflo Belarus

Tel: +375 17 3934609

sales@tapflo.by

Bulgaria

Tapflo EOOD

Tel: +359 (2) 974 18 54

office@tapflo.org

Canada

Tapflo Canada

Tel: +1 514 813 5754

canada@tapflo.com

Croatia

Tapflo GmbH

Tel: +385 91 4884 666

sales@tapflo.hr

Czech Republic

Tapflo s.r.o.

Tel: +420 513033924

tapflo@tapflo.cz

China

Tapflo (Wuxi)

Tel: +86 510 8241 7602

sales@tapflo.cn

Denmark

Tapflo Danmark

Tel: +45 36 454600

info@tapflo.dk

France

Tapflo France

Tel: +33 1 34 78 82 40

info@tapflo.fr

Georgia

Tapflo Georgia

Tel: +995 577 463010

sales@tapflo.ge

India

Tapflo Fluid Handling India

Pvt Ltd

Tel: +91 20 65000215

ad@tapflo.in

Ireland

Tapflo Ireland Ltd

Tel: +353 1 2011911

info@tapflo.ie

Italy

Tapflo Italia

Tel: +39 0362307698

info@tapfloitalia.com

Japan

Tapflo Japan K.K.

Tel: +81-3-6240-3510

tapflojp@tapflo.co.jp

Kazakhstan

Tapflo Kazakstan

Tel: +7 727 3278347

sales@tapflo.kz

Poland

Tapflo Sp. z o.o.

Tel: +48 58 530 42 00

info@tapflo.pl

Romania

S.C. Tapflo Rom. S.r.l.

Tel: +40 21 3451255

sales@tapflo.ro

Russia

Tapflo Company

Tel: +7 495 232 18 28

sales@tapflo.com.ru

Serbia

Tapflo d.o.o.

Tel: +381 21 44 58 08

sales@tapflo.rs

Slovakia

Tapflo s.r.o.

Tel: +421 911 137 883

tapflo@tapflo.sk

Slovenia

Tapflo GmbH

Tel: +386 68 613 474

ales@tapflo.hr

Spain

Tapflo Iberica

Tel: +34 91 8093182

avives@tapfloiberica.es

South Africa

Tapflo (Pty) Ltd

Tel: +27 31 701 5255

sales@tapflo.co.za

Turkey

Tapflo Makina Ltd

Tel: +90 216 467 33 11

sales@tapflo.com.tr

Ukraine

TOB Tapflo

Tel: +380 44 222 68 44

sales@tapflo.com.ua

Uzbekistan

Tapflo Uzbekistan

Tel.: +998 712340940

sales@tapflo.uz

United Kingdom

Tapflo (UK) Ltd

Tel: +44 2380 252325

sales@tapflo pumps.co.uk